OPERATING AND SERVICE MANUAL

ID No. SYL-L725
– RETURN TO –
INSTRUMENT CONTROL
SYLVANIA SES -- West

DC POWER SUPPLY

SCR-1P SERIES, MODEL 6443B

SERIAL NUMBER PREFIX 6G

HEWLETT hp PACKARD

OPERATING AND SERVICE MANUAL

ID No. SYL-L725
– RETURN TO –
INSTRUMENT CONTROL
SYLVANIA SES -- West

DC POWER SUPPLY

SCR-1P SERIES, MODEL 6443B

SERIAL NUMBER PREFIX 6G

HEWLETT hp PACKARD

HEWLETT hp PACKARD

CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from date of delivery, or in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard. No other warranty is expressed or implied. We are not liable for consequential damages.

For any assistance contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

ID No. SYL-L725
- RETURN TO -
INSTRUMENT CONTROL
SYLVANIA SES -- West

DC POWER SUPPLY

SCR-1P SERIES, MODEL 6443B

SERIAL NUMBER PREFIX 6G

June, 1966
hp Stock No. 06443-90001

TABLE OF CONTENTS

Section	Title	Page
I	GENERAL INFORMATION	1-1
	1-1. Description	1-1
	1-2. General	1-1
	1-4. Overload Protection	1-1
	1-7. Cooling	1-1
	1-9. Monitoring	1-1
	1-11. Output Terminals	1-1
	1-13. Instrument Identification	1-2
II	INSTALLATION	2-1
	2-1. Initial Inspection	2-1
	2-2. General	2-1
	2-4. Mechanical Check	2-1
	2-6. Electrical Check	2-1
	2-8. Installation Data	2-1
	2-9. General	2-1
	2-11. Location	2-1
	2-13. Power Requirements	2-2
	2-15. Power Cable	2-2
	2-18. Repackaging for Shipment	2-2
III	OPERATING INSTRUCTIONS	3-1
	3-1. Controls and Indicators	3-1
	3-3. Operation	3-1
	3-4. General	3-1
	3-6. Normal	3-1
	3-10. Connecting Load	3-2
	3-14. Remote Sensing	3-2
	3-17. Remote Programming	3-3
	3-26. Parallel	3-5
	3-30. Series	3-5
	3-35. Auto-Tracking	3-6
	3-38. Operating Considerations	3-7
	3-39. Pulse Loading	3-7
	3-41. Output Capacitance	3-7
	3-44. Negative Voltage Loading	3-7
	3-46. Negative Current Loading	3-7

POWER SUPPLY 6443B

HEWLETT PACKARD

LVANIA ELECTRONIC SYSTEMS

DIVISION OF SYLVANIA ELECTRIC PRODUCTS INC.
P.O. Box 188, Mountain View, California 94042

I.D. NO: SYL-L725

INSTRUMENT MANUAL SIGN-OUT SHEET

te Out	Taken By	Date In	Date Out	Taken By	Date In
	PRINT: EXT: SIGN:			PRINT: EXT: SIGN:	

-1855 (11-65)

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_06078

TABLE OF CONTENTS (cont.)

Section	Title	Page
IV	PRINCIPLES OF OPERATION	4-1
	4-1. Block Diagram Description	4-1
	4-9. Circuit Description	4-2
	4-10. AC Input	4-2
	4-12. DC Output	4-2
	4-14. Voltage Input	4-2
	4-20. Current Input	4-3
	4-24. Gating Circuit	4-4
	4-27. Turn-On Circuit	4-4
	4-29. SCR Regulator Control	4-4
	4-37. SCR Regulator	4-6
	4-42. Bias and Reference Circuit	4-6
V	MAINTENANCE	5-1
	5-1. General	5-1
	5-3. Measurement Techniques	5-1
	5-7. Performance Check	5-2
	5-8. General	5-2
	5-10. Rated Output and Meter Accuracy	5-2
	5-13. Line Regulation	5-3
	5-16. Load Regulation	5-4
	5-19. Ripple and Noise	5-4
	5-21. Transient Recovery Time	5-5
	5-23. Additional Specification Check	5-6
	5-24. Temperature Coefficient	5-6
	5-27. Output Stability	5-6
	5-30. Remote Programming	5-7
	5-33. Output Impedance	5-9
	5-35. Output Inductance	5-9
	5-37. Cover Removal	5-10
	5-39. Troubleshooting	5-10
	5-40. General	5-10
	5-42. Trouble Analysis	5-10
	5-49. Repair and Replacement	5-12
	5-51. Adjustments and Calibrations	5-14
	5-52. General	5-14
	5-54. Meter Zero	5-14
	5-56. Voltmeter Tracking	5-14
	5-58. Ammeter Tracking	5-14
	5-60. Constant Voltage Programming Current	5-15
	5-62. Zero Voltage Output	5-15
	5-64. Constant Current Programming Current	5-15

TABLE OF CONTENTS (cont.)

Section		Title	Page
	5-66.	Zero Current Output	5-16
	5-68.	Bias and Reference Line Regulation	5-16
	5-70.	Line Imbalance	5-17
	5-72.	Constant Current Load Regulation	5-18
VI		REPLACEABLE PARTS	6-1
	6-1.	Introduction	6-1
	6-4.	Ordering Information	6-1

Table 1-1. Specifications

INPUT:	105-125 vac, 57 to 63 cps, single phase, 6.5 amperes, 400 watts max.
RATED OUTPUT:	Constant Voltage: 0 to 120 vdc. Constant Current: 0 to 2.5 amperes dc
LINE REGULATION:	Constant Voltage: Less than 60 mv for 105-125 vac input change. Constant Current: Less than 25 ma for 105-125 vac input change.
LOAD REGULATION:	Constant Voltage: Less than 120 mv for 0 to 2.5 ampere load change. Constant Current: Less than 25 ma for 0 to 120 vdc load change.
RIPPLE AND NOISE:	240 mvrms
OPERATING TEMPERATURE RANGE:	0°C to 50°C
STORAGE TEMPERATURE RANGE:	-20°C to 71°C
TEMPERATURE COEFFICIENT:	Constant Voltage: 0.05% plus 30 mv per degree centigrade. Constant Current: 8 ma per degree centigrade.
OUTPUT STABILITY: (after 30-minute warm-up)	Constant Voltage: 0.15% plus 90 mv for 8 hours at constant temperature. Constant Current: 25 ma for 8 hours at constant temperature.
REMOTE PROGRAMMING:	Constant Voltage: 300 ohms per volt ±1% Constant Current: 100 ohms per ampere
TYPICAL OUTPUT IMPEDANCE:	Less than 0.1 ohm from dc to 0.5 cps Less than 2.0 ohm from 0.5 cps to 100 cps Less than .5 ohm from 100 cps to 1kc Less than 4.0 ohm from 1kc to 100 kc
OUTPUT INDUCTANCE:	2.0 microhenry

Table 1-1. Specifications (cont.)

TRANSIENT RECOVERY TIME:	In constant voltage operation, less than 300 milliseconds is required for output voltage recovery to within 600 millivolts of the nominal output voltage following a load change equal to one half the maximum current rating of the power supply. Nominal output voltage is defined as the mean between the no-load and full-load voltages. The transient amplitude is less than 4.0 volt per ampere for any load change between 20% and 100% of rated output current. (Excluding the initial spike of approximately 100 microseconds duration which is significant only for load rise times faster than 0.2 ampere per microsecond.)
SIZE AND WEIGHT:	Height 3-1/2 in. | Width 19 in. | Depth 17-1/2 in. | Weight 31 lb.
FINISH:	Light gray front panel with dark gray case.

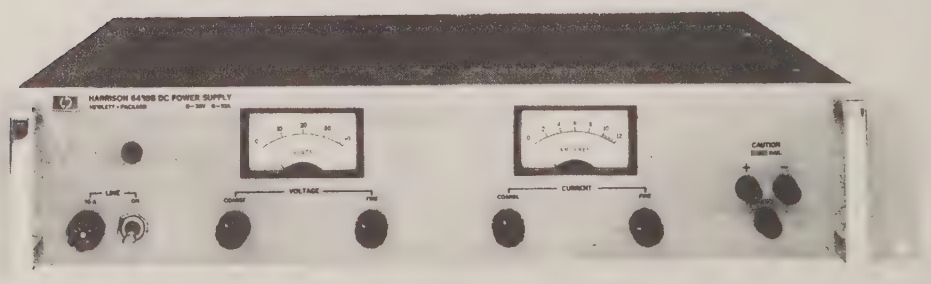

Figure 1-1. Model 6443B DC Power Supply

SECTION I

GENERAL INFORMATION

1-1. DESCRIPTION

1-2. GENERAL

1-3. The H-Lab Model 6443A DC Power Supply (fig. 1-1) is a completely solid-state, compact, well-regulated, constant voltage/constant current dc power supply suitable for either bench or relay rack operation. A three-wire five-foot power cord is provided. The output is continuously variable between 0 and 120vdc, and between 0 and 2.5amperes. Detailed specifications are given in table 1-1.

1-4. OVERLOAD PROTECTION

1-5. A crossover feature protects both power supply and load in constant voltage operation. Automatic crossover circuitry switches the power supply from constant voltage to constant current operation if the output current exceeds a preset limit. This crossover circuitry also protects the load from overvoltage during constant current operation by automatically switching the power supply into constant voltage operation. The user can adjust the crossover point via the front panel controls (para. 3-8 and 3-9).

1-6. The power supply is protected from reverse voltage (positive voltage applied to negative terminal) by a diode that shunts current across the output terminals when this condition exists. The ac input is fused. A double-pole on/off switch opens both power leads in the off position.

1-7. COOLING

1-8. Convection cooling is used. No fan is required. The power supply has no moving parts (except meter movement).

1-9. MONITORING

1-10. Two front-panel meters are provided for monitoring output voltage and current. The voltmeter has a 0 to 120 volt range and the ammeter has a 0 to 3 ampere range. Each meter has a 2% accuracy at full scale.

1-11. OUTPUT TERMINALS

1-12. Output power is available via a terminal strip on the rear panel. The rear panel terminal strip also enables the power supply to be connected for different modes of operation (para. 3-3). The output terminals are isolated from the chassis

and either the positive or the negative terminal may be connected to the chassis via a separate ground terminal located adjacent to the output terminals. The power supply is insulated to permit operation up to 300 vdc off ground.

1-13. INSTRUMENT IDENTIFICATION

1-14. Harrison Laboratories power supplies are identified by a three-part designation. The first part is the model number: the second part is the serial number; and the third part is the manufacturing code letter. This manual applies to all Model 6443A power supplies with the same manufacturing code letter given in the title page. Change sheets will be supplied with the manual to make it apply to Model 6443Apower supplies with different manufacturing code letters.

SECTION II

INSTALLATION

2-1. INITIAL INSPECTION

2-2. GENERAL

2-3. Before shipment, the power supply was inspected and found free of mechanical and electrical defects. If damage to the shipping carton is evident, ask that the carrier's agent be present when the power supply is unpacked. As soon as the power supply is unpacked, inspect it for any damage that may have occurred in transit. Also check the cushioning material for signs of severe stress (may be indication of internal damage). Save all packing materials until the inspection is completed. If damage is found, proceed as instructed in the Claim for Damage in Shipment notice on the back of the front cover of this manual.

2-4. MECHANICAL CHECK

2-5. Check that there are no broken knobs or connectors, that the external surface is not scratched or dented, that the meter faces are not damaged, and that all controls move freely. Any external damage may be an indication of internal damage.

2-6. ELECTRICAL CHECK

2-7. Check that the straps on the terminal strip at the rear of the power supply are secure and that the strapping pattern is in accord with figure 3-2. Check the electrical performance of the power supply as soon as possible after receipt. A performance check that is suitable for incoming inspection is given in paragraphs 5-7 through 5-22.

2-8. INSTALLATION DATA

2-9. GENERAL

2-10. The power supply is shipped ready for bench or relay rack (19 inch) operation.

2-11. LOCATION

2-12. Because the power supply is cooled by convection, there must be enough space along the sides and rear of the power supply to permit free flow of cooling air. The power supply should be located in an area where the ambient temperature does not exceed 50°C.

2-13. POWER REQUIREMENTS

2-14. The power supply is operated from a 105 to 125 volt (115 volts nominal), 57 to 63 cps, single phase power source. At 115 volts, 60 cps, the full load requirement is 400 watts at 6 amperes.

2-15. POWER CABLE

2-16. To protect operating personnel, the National Electrical Manufacturers Association (NEMA) recommends that the instrument panel and cabinet be grounded. This instrument is equipped with a three-conductor power cable. The third conductor is the ground conductor and when the cable is plugged into an appropriate receptacle, the instrument is grounded. The offset pin on the power cable three-prong connector is the ground connection.

2-17. To preserve the protection feature when operating the instrument from a two-contact outlet, use a three-prong to two-prong adaptor and connect the green lead on the adaptor to ground.

2-18. REPACKAGING FOR SHIPMENT

2-19. To insure safe shipment of the instrument, it is recommended that the package designed for the instrument be used. The original packaging material is reusable. If it is not available, contact your Hewlett-Packard field office for packing materials and information. A packing carton part number is included in the parts list.

2-20. Attach a tag to the instrument which specifies the owner, model number, full serial number, and service required, or a brief description of the trouble.

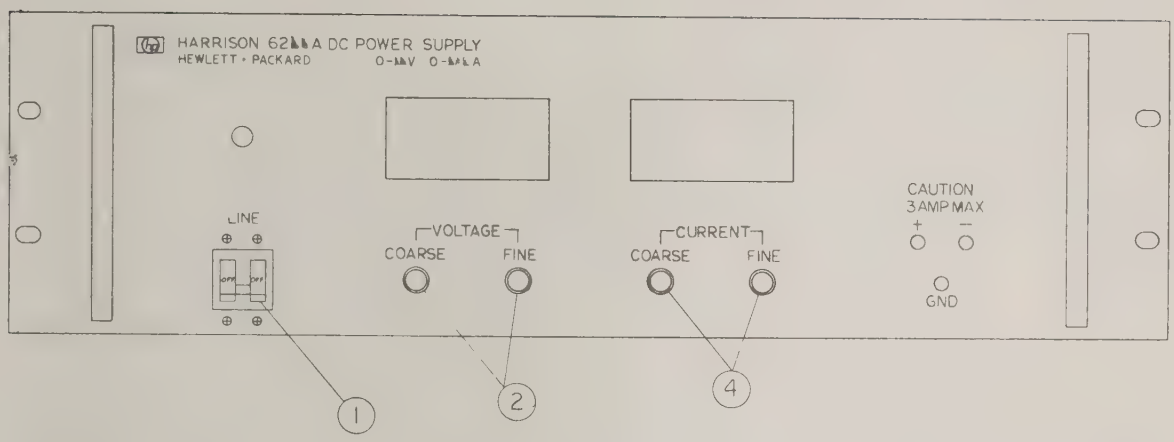

1. TURN AC POWER ON.
2. ADJUST COARSE AND FINE VOLTAGE CONTROLS UNTIL THE VOLTAGE ON THE OUTPUT VOLTAGE METER IS OF DESIRED VALUE.
3. SHORT CIRCUIT THE OUTPUT TERMINALS (AT REAR OF POWER SUPPLY)
4. ADJUST COARSE AND FINE CURRENT CONTROLS UNTIL THE CURRENT ON THE OUTPUT CURRENT METER IS OF DESIRED VALUE.
5. REMOVE SHORT AND CONNECT LOAD.

OPERATING PROCEDURE
FIG 3-1

SECTION III

OPERATING INSTRUCTIONS

3-1. CONTROLS AND INDICATORS

3-2. The controls and indicators are illustrated in figure 3-1.

3-3. OPERATION

3-4. GENERAL

3-5. The power supply is designed so that its mode of operation can be selected by making strapping connections between particular terminals on the terminal strip at the rear of the power supply. The terminal designations are stenciled in white on the power supply and are adjacent to their respective terminals. The strapping patterns illustrated in this section show neither terminal grounded. The operator can ground either terminal or operate the power supply up to 300 vdc off ground (floating).

3-6. NORMAL

3-7. GENERAL. The power supply is normally shipped with its rear terminal strapping connections arranged for constant voltage/constant current, local sensing, local programming, single unit mode of operation. This strapping pattern is illustrated in figure 3-2. The operator selects either a constant voltage or a constant current output using the front panel controls (local programming, no strapping changes are necessary).

3-8. CONSTANT VOLTAGE. To select a constant voltage output, proceed as follows:

a. Turn-on power supply and adjust VOLTAGE controls for desired output voltage (output terminals open).

b. Short output terminals and adjust CURRENT controls for maximum output current allowable (current limit), as determined by load conditions. If a load change causes the current limit to be exceeded, the power supply will automatically cross-over to constant current output at the preset current limit and the output voltage will drop proportionately. In setting the current limit, allowance must be made for high peak currents which can cause unwanted cross-over (refer to para. 3-40).

3-9. CONSTANT CURRENT. To select a constant current output, proceed as follows:

a. Short output terminals and adjust CURRENT controls for desired output current.

b. Open output terminals and adjust VOLTAGE controls for maximum output voltage allowable (voltage limit), as determined by load conditions. If a load change causes the voltage limit to be exceeded, the power supply will automatically crossover to constant voltage output at the preset voltage limit and the output current will drop proportionately. In setting the voltage limit, allowance must be made for high peak voltages which can cause unwanted crossover. (Refer to para. 3-40.)

3-10. CONNECTING LOAD

3-11. Two pairs of output terminals are provided on the terminal strip at the left rear side (facing rear) of the power supply. Either pair of terminals or both may be used. The terminals are marked + and -. A separate ground terminal is located adjacent to the output terminals. The positive or negative output terminal may be grounded, or neither grounded (floating operation; permitted to 300 vdc off ground).

3-12. Each load should be connected to the power supply output terminals using separate pairs of connecting wires. This will minimize mutual coupling effects between loads and will retain full advantage of the low output impedance of the power supply. Each pair of connecting wires should be as short as possible and twisted or shielded to reduce noise pickup. (If shield is used, connect one end to power supply ground terminal and leave the other end unconnected.)

3-13. If load considerations require that the output power distribution terminals be remotely located from the power supply, then the power supply output terminals should be connected to the remote distribution terminals via a pair of twisted or shielded wires and each load separately connected to the remote distribution terminals. For this case, remote sensing should be used (para. 3-14).

NOTE

It is recommended that the voltage drop in the connecting wires not exceed 2 volts. If a larger drop must be tolerated, please consult a Hewlett-Packard field representative.

3-14. REMOTE SENSING

3-15. Remote sensing is used to ameliorate the degradation of regulation which will occur at the load when the voltage drop in the connecting wires is appreciable. The use of remote distribution terminals (para. 3-13) is an example where remote sensing may be required. Due to the voltage drop in the load leads, it may be necessary to slightly increase the current limit in constant voltage operation.

CAUTION

Turn-off power supply before rearranging strapping pattern at the power supply rear terminal strip. If the -S terminal is opened while the power supply is on, the output voltage and current may exceed their maximum ratings and result in damage to the load. The power supply will not be damaged.

3-16. Proceed as follows:

a. Turn-off power supply and arrange rear terminal strapping pattern as shown in figure 3-3. The sensing wires will carry less than 10 ma and need not be as heavy as the load wires. It is recommended that sensing and load wires be twisted and shielded. (If shield is used, connect one end to power supply negative terminal and leave the other end unconnected.)

CAUTION

Observe polarity when connecting the sensing leads to the load.

b. In order to maintain low ac output impedance, a capacitor with a minimum rating of 4,000μfd and 150 vdcw should be connected across the load using short leads. This capacitor must have high-frequency characteristics as good or better than C17 has (see parts list).

c. Turn-on power supply.

3-17. REMOTE PROGRAMMING

3-18. GENERAL. The constant voltage and constant current outputs may be programmed (controlled) from a remote location. The front-panel controls are disabled in the following instructions. Changes in the rear terminal strapping arrangement are necessary. The wires connecting the programming terminals of the power supply to the remote programming device should be twisted or shielded to reduce noise pick-up. (if shield is used, connect one end to power supply ground terminal and leave the other end unconnected.) Remote sensing (para. 3-14) may be used simultaneously with remote programming. However, the strapping patterns shown in figures 3-4, 3-5, and 3-6 employ only local sensing and do not show the load connections.

CAUTION

Turn-off power supply before rearranging strapping pattern at the power supply rear terminal strip. If the current programming terminals are opened while the power supply is on, the output current will exceed its maximum rating and may result in damage to the load. The power supply will not be damaged. The constant voltage programming terminals have a zener diode connected internally across them to limit the programming voltage and thus prevent excessive output voltage.

3-19. CONSTANT VOLTAGE. In the constant voltage mode of operation, either a resistance or voltage source can be used for remote programming. For resistance programming, the programming coefficient (fixed by the programming current) is 300 ohms per volt (output voltage increases 1 volt for each 300 ohms in series with programming terminals). The programming current is adjusted to within 1% of 3.33ma at the factory. If greater programming accuracy is required, change R39 (shunt). The programming resistance should be a stable, low noise, low-temperature (less than 30 ppm per ^{o}C) resistor with a power rating at least 10 times its actual dissipation.

3-20. The output voltage of the power supply should be 0 +20 mv, -100 mv when the programming resistance is zero ohms. This tolerance can be improved by changing R6. For further information on improving this tolerance, refer to paragraph 5-63 and to H-Lab Tech Letter #1.

3-21. If the resistance programming device is controlled by a switch, make-before-break contacts should be used in order to avoid momentary opening of the programming terminals. To connect the remote programming resistance, arrange rear terminal strapping pattern as shown in figure 3-4. The front-panel VOLTAGE controls are disabled when the strap between A6 and A7 is removed.

3-22. If a voltage source is used as the remote programming device, the output voltage of the power supply will vary in a 1 to 1 ratio with the programming voltage. The load on the voltage source will not exceed 25 microamperes. To connect the programming voltage, arrange rear terminal strapping pattern as shown in figure 3-5.

3-23. CONSTANT CURRENT. In constant current operation, resistance programming is used. The resistance programming coefficient (fixed by the programming current)is 100ohms per ampere (output current increases 1 ampere for each 100 ohms in series with programming terminals). The programming current is adjusted to within approximately 10% of 4 ma at the factory. If greater programming accuracy is required, change R41 (shunt). The programming resistance should be a stable, low noise, low-temperature (less than 30 ppm per ^{o}C) resistor with a power rating at least 10 times its actual dissipation.

3-24. The output current of the power supply should be 0 + 25ma, -50 ma when the programming resistance is zero ohms. This tolerance can be improved by changing R20. For further information on improving this tolerance, refer to paragraph 5-67 and to H-Lab Tech Letter #1.

3-25. If the resistance programming device is controlled by a switch, make-before-break contacts should be used to avoid momentary opening of the programming terminals. To connect the remote programming resistance, arrange rear terminal strapping as shown in figure 3-6. The front-panel CURRENT controls are disabled when the strap between A1 and A2 is removed.

3-26. PARALLEL

3-27. GENERAL. Two or more power supplies can be connected in parallel to obtain a total output current greater than that available from one power supply. The total output current is the sum of the output currents of the individual power supplies. Each power supply can be turned-on or off separately. Remote sensing (para. 3-14) and programming (para. 3-17) can be used; however, the strapping patterns shown in figures 3-7 and 3-8 employ only local sensing and programming.

3-28. NORMAL. The strapping pattern for normal parallel operation of two power supplies is shown in figure 3-7. The output current controls of each power supply can be separately set. The output voltage controls of one power supply (master) should be set to the desired output voltage; the other power supply (slave) should be set for a slightly larger output voltage. The master will act as a constant voltage source; the slave will act as a constant current source, dropping its output voltage to equal the master's.

3-29. AUTO-PARALLEL. The strapping patterns for auto-parallel operation of two and three power supplies are shown in figures 3-8A and B, respectively. Auto-parallel operation permits equal current sharing under all load conditions, and allows complete control of output current from one master power supply. The output current of each slave is approximately equal to the master's. Because the output current controls of each slave is operative, they should be set to maximum to avoid having the slave revert to constant current operation; this would occur if the master output current setting exceeded the slave's.

3-30. SERIES

3-31. GENERAL. Two or more power supplies can be connected in series to obtain a total output voltage higher than that available from one power supply. The total output voltage is the sum of the output voltages of the individual power supplies. A single load can be connected across the series-connected power supplies or a separate load can be connected across each power supply. The power supply has a reverse polarity diode connected internally across the output terminals to protect the power supply against reverse polarity voltage if the load is short-circuited or if one power supply is turned off while its series partners are on.

3-32. The output current controls of each power supply are operative and the current limit is equal to the lowest control setting. If any output current controls are set too low with respect to the total output voltage, the series power supplies will automatically crossover to constant current operation and the output voltage will drop. Remote sensing (para. 3-14) and programming (para. 3-17) can be used; however, the strapping patterns shown in figures 3-9 and 3-10 employ only local sensing and programming.

3-33. NORMAL. The strapping pattern for normal series operation of two power supplies is shown in figure 3-9. The output voltage controls of each power supply must be adjusted to obtain the total output voltage.

3-34. AUTO-SERIES. The strapping patterns for auto-series operation of two and three power supplies are shown in figures 3-10A and B, respectively. Auto-series operation permits control of the output voltage of several power supplies (slaves) from one master power supply. The master must be the most negative power supply of the series. To obtain positive and negative voltages, the + terminal of the master may be grounded. For a given position of the slave output voltage controls, the total output voltage is determined by the master output voltage controls. The output voltage controls of a slave determines the percentage of the total output voltage that the slave will contribute. Turn-on and turn-off of the series is controlled by the master. In order to maintain the temperature coefficient and stability specifications of the power supply, the external resistors shown in figures 3-10A and B, should be stable, low-noise, low-temperature (less than 30 ppm per ^{o}C) resistors. The value of these resistors is determined by multiplying the output voltage of the applicable slave by the programming coefficient (300 ohms/volt).

3-35. AUTO-TRACKING

3-36. The strapping patterns for auto-tracking operation of two and three power supplies are shown in figures 3-11A and B, respectively. Automatic tracking operation permits the output voltages of two or more power supplies to be referenced to a common buss; one of the power supplies (master) controls the magnitude of the output voltage of the others (slaves) for a given position of the slave output voltage controls. The master must be the most negative power supply in the group. The output voltage of a slave is a percentage of the master output voltage. The output voltage controls of a slave determines this percentage. Turn-on and turn-off of the power supplies is controlled by the master. Remote sensing (para. 3-14) and programming (para. 3-17) can be used; however, the strapping patterns shown in figure 3-4 employ only local sensing and programming.

3-37. The value of the external resistor shown in figure 3-11 is determined by dividing the voltage difference between the master and the applicable slave by the programming current (nominally 3.33 ma; refer to para. 3-19). Finer adjustment of the slave output voltage can be accomplished using the slave output voltage controls. In order to maintain the temperature coefficient and stability specifications of the power supply, the external resistors should be stable, low-noise, low-temperature (less than 30 ppm per ^{o}C) resistor.

3-38. OPERATING CONSIDERATIONS

3-39. PULSE LOADING

3-40. The power supply will automatically cross over from constant voltage to constant current operation, or the reverse, in respone to an increase (over the preset limit) in the output current or voltage, respectively. Although the preset limit may be set higher than the average output current or voltage, high peak currents or voltages (as occur in pulse loading) may exceed the preset limit and cause crossover to occur. To avoid this unwanted crossover, the preset limit must be set for the peak requirement and not the average.

3-41. OUTPUT CAPACITANCE

3-42. There are capacitors (internal) across the output terminals of the power supply. These capacitors help to supply high-current pulses of short duration during constant voltage operation. Any capacitance added externally will improve the pulse current capability, but will decrease the safety provided by the constant current circuit. A high-current pulse may damage load components before the average output current is large enough to cause the constant current circuit to operate.

3-43. The effects of the output capacitors during constant current operation are as follows:

a. The output impedance of the power supply decreases with increasing frequency.

b. The rise time of the output voltage is increased.

c. A large surge current causing a high power dissipation in the load occurs when the load impedance is reduced rapidly.

3-44. NEGATIVE VOLTAGE LOADING

3-45. A diode is connected across the output terminals. Under normal operating conditions, the diode is reverse biased (anode connected to negative terminal). If a negative voltage is applied to the output terminals (positive voltage applied to negative terminal), the diode will conduct, shunting current across the output terminals and limiting the voltage to the forward voltage drop of the diode. This diode protects the filter and output electrolytic capacitors.

3-46. NEGATIVE CURRENT LOADING

3-47. Certain types of loads may cause current to flow into the power supply in the direction opposite to the output current. If the reverse current exceeds 0.02 ampere preloading will be necessary. For example: if the load delivers 1 ampere to the power supply with the power supply output voltage at 18 vdc, a resistor equal to

18 ohms (18v/1a) should be connected across the output terminals. Thus, the 18 ohm resistor shunts the reverse current across the power supply. For more information on preloading, refer to paragraph C4 in the H-Lab Application Manual.



Figure 3-2.
Normal Strapping Pattern

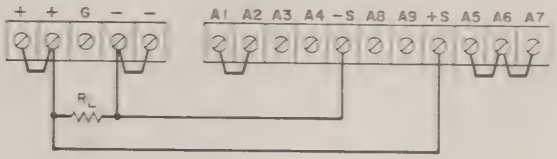

Figure 3-3.
Remote Sensing

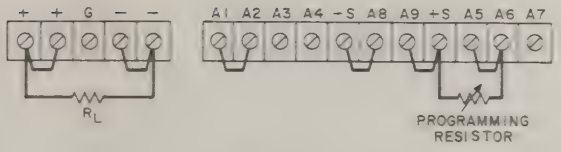

Figure 3-4.
Remote Resistance Programming
(Constant Voltage)

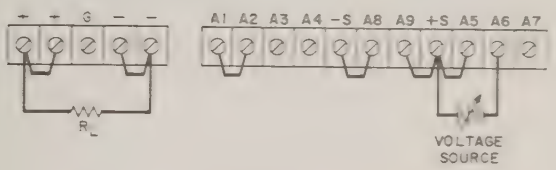

Figure 3-5.
Remote Voltage Programming
(Constant Current)

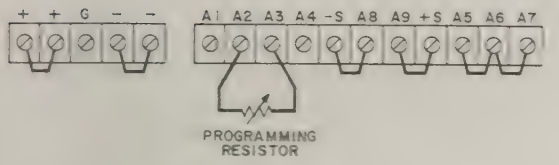

Figure 3-6.
Remote Resistance Programming
(Constant Current)

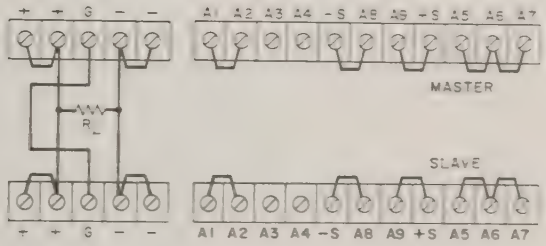

Figure 3-7.
Normal Parallel Operation

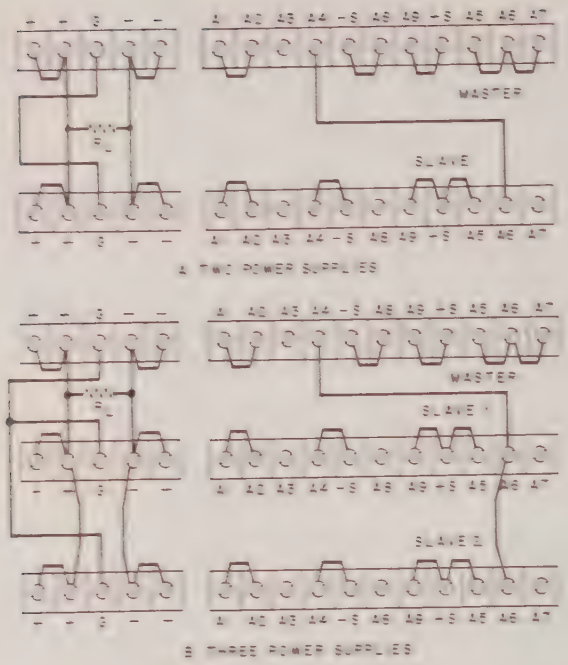

Figure 3-8.
Auto-Parallel Operation

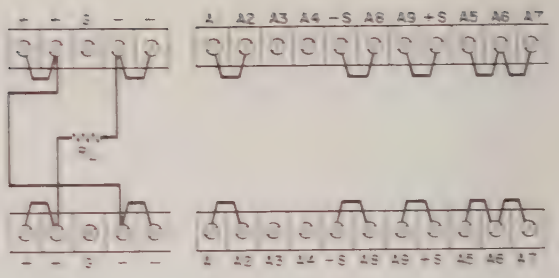

Figure 3-9.
Normal Series Operation

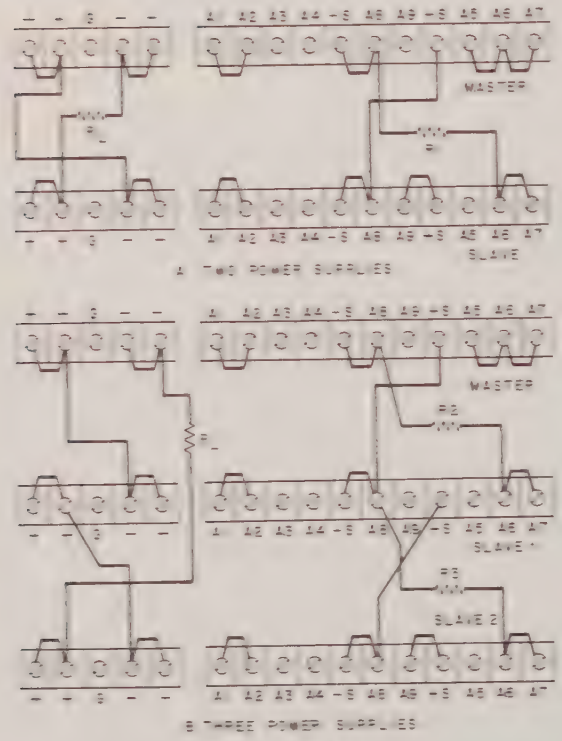

Figure 3-10.
Auto-Series Operation

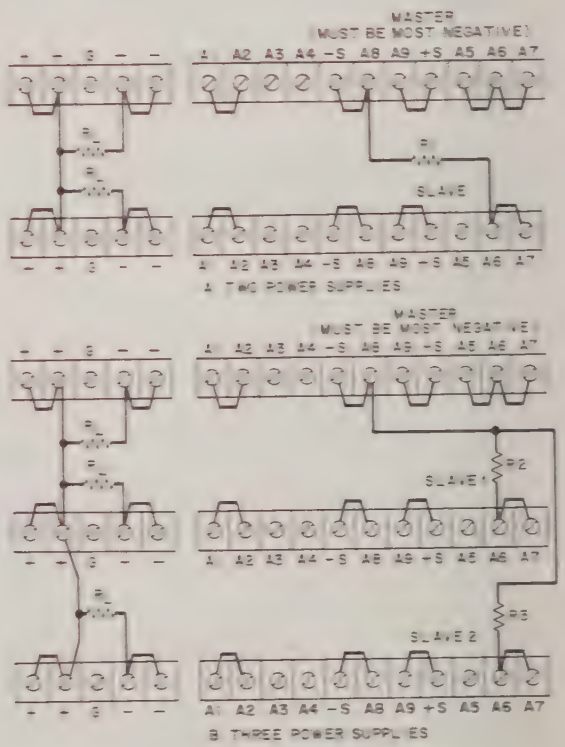

Figure 3-11.
Auto-Tracking Operation

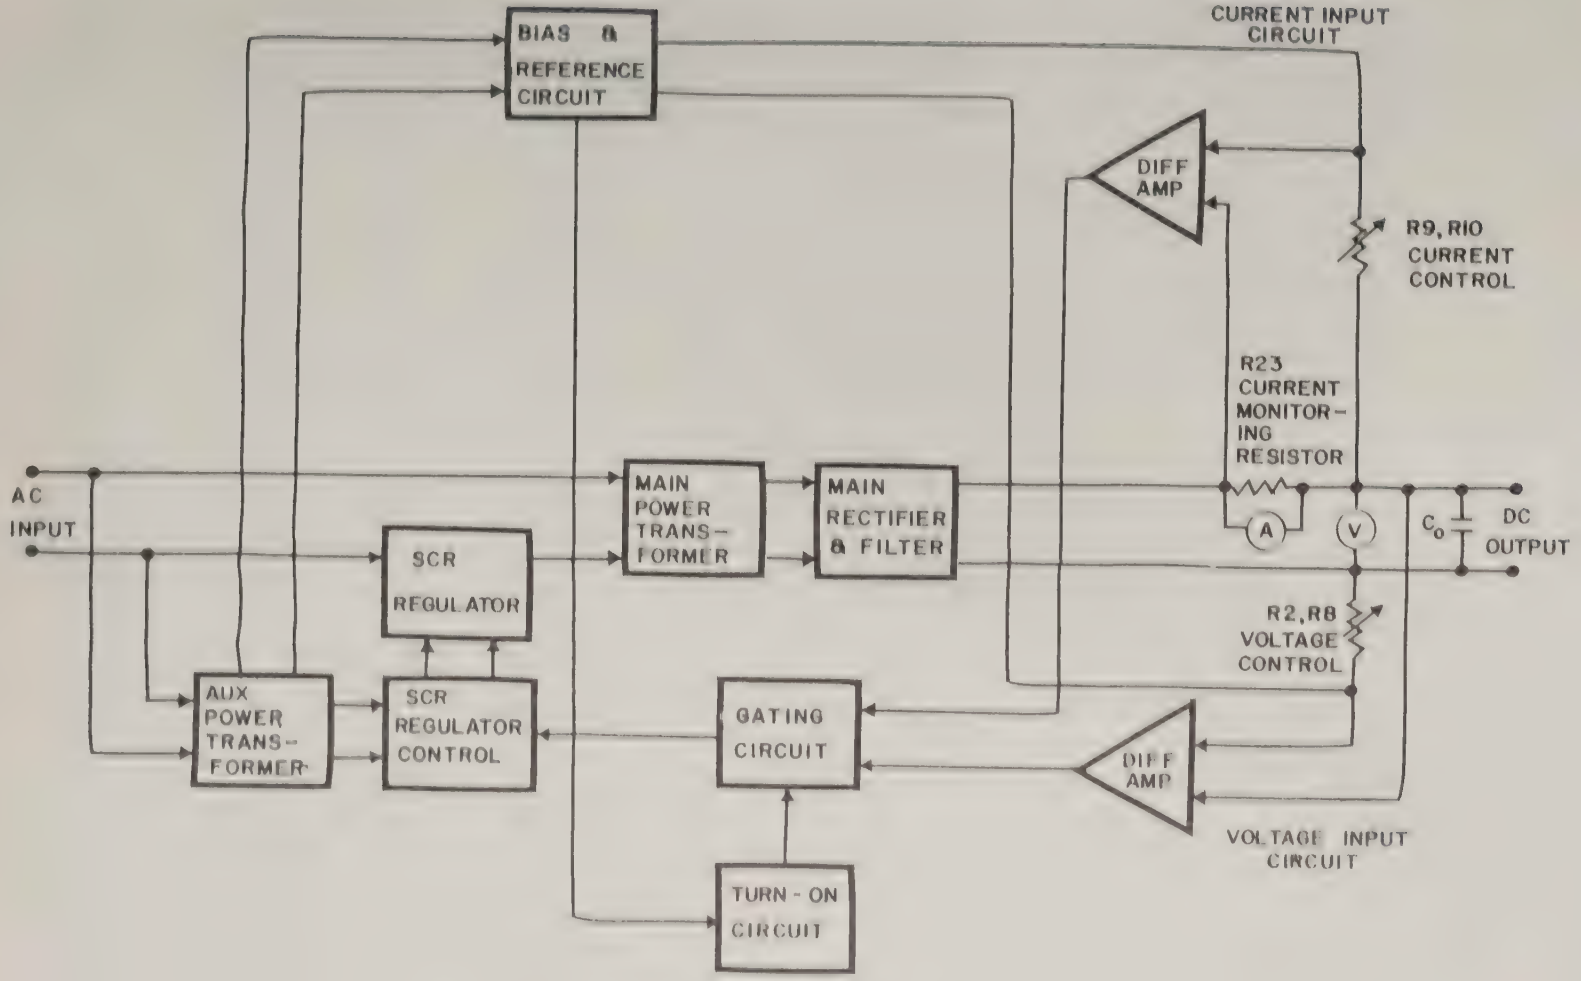

FIGURE 4-1. BLOCK DIAGRAM

SECTION IV

PRINCIPLES OF OPERATION

4-1. BLOCK DIAGRAM DESCRIPTION (See figure 4-1.)

4-2. The main power transformer isolates the ac input from the power supply and reduces it to the voltage level required. Rectification and filtering produces a smoothed dc output across the - and + terminals. A large capacitor (C_O) is connected across the - and + terminals for low ac output impedance and to help supply large pulse currents. An SCR regulator controls the ac input to provide good regulation of the dc output. The auxiliary power transformer powers the SCR regulator control circuit and the bias and reference circuit which produces dc bias and reference voltages for the power supply.

4-3. The SCR regulator is controlled by the SCR regulator control circuit which operates in response to signals developed by the voltage or current input circuit. A gating circuit assures that only one input circuit is used at a time.

4-4. The voltage and current input circuits operate in a similar manner. Each circuit has a differential amplifier that amplifies an error voltage that is proportional to the difference between the actual output and the programmed output. The programmed output is determined by the resistance of the programming resistors (voltage and current controls). Each programming resistor has a constant current through it which is maintained by the bias and reference circuit.

4-5. The voltage input circuit differential amplifier detects the error voltage that is proportional to the difference between the voltage across its programming resistors (R2-R8) and the dc output voltage. The error voltage is amplified and passed through the gating circuit to the SCR regulator control which triggers the SCR regulator. The SCR regulator increases or decreases the ac input voltage to the main power transformer as required to maintain a constant load voltage that is equal to the programmed voltage. In constant voltage operation, the gating circuit is biased to inhibit the input from the current input circuit.

4-6. The current input circuit differential amplifier detects the error voltage that is proportional to the difference between the voltage across its programming resistors (R9-R10) and the voltage across current monitoring resistor R23. The voltage across R23 is proportional to the load current. The SCR regulator responds to the amplified error voltage by increasing or decreasing the ac input current to the main power transformers as required to maintain a constant load current. In constant current operation, the gating circuit is biased to inhibit the input from the voltage input circuit.

4-7. To prevent overvoltage and excessive surge current when the power supply is turned-on, the turn-on circuit establishes initial conditions in the gating circuit. The turn-on circuit is activated by the bias and reference circuit when the power supply is turned-off.

4-8. A voltmeter is connected across the - and + terminals to monitor the output voltage. An ammeter is connected across current monitoring resistor R23 to monitor the output current (proportional to voltage across R23).

4-9. CIRCUIT DESCRIPTION (See figure 4-2 at back of manual.)

4-10. AC INPUT

4-11. The 105-125 vac, 57-63 cps, single phase input is applied to transformer T2 and to the series combination of transformer T1 and SCR's CR17 and CR18 which are in parallel opposition. The SCR's are used to regulate the dc output by controlling the average value of the ac input to transformer T1. Capacitors C11 and C12 smooth transients to prevent the SCR's from being triggered by a rapidly changing voltage from anode to cathode. Resistor R21 damps oscillations that may occur due to resonance of C12 and the leakage inductance of T1. The leakage inductance of T1 limits the peak input current.

4-12. DC OUTPUT

4-13. The output of the secondary of transformer T1 is full-wave rectified by bridge rectifier CR19 through CR22 and filtered by pi-section filter C13, C17, and R29. The dc output is regulated to a constant value by the SCR's in the ac input line. Capacitor C17 is the output capacitor. Diode CR23 is connected across the filtered dc output to protect the power supply from reverse voltage applied to the output terminals. Resistor R23 is the current monitoring resistor; the full load current flows through it. Resistors R25 and R27 are used to calibrate the voltmeter and ammeter, respectively.

4-14. VOLTAGE INPUT

4-15. GENERAL. The voltage input circuit is basically a differential amplifier (Q1-Q2) that detects any voltage difference between the programmed output voltage and the actual output voltage. The differential amplifier output voltage varies in proportion to the power supply output voltage variation.

4-16. Q2 INPUT. Voltage divider R6-R47 maintains a slightly negative base bias to ensure that the output voltage can be programmed to zero. The output of Q2 is emitter-coupled (resistor R4) to Q1.

4-17. Q1 INPUT. There are three inputs to the base of Q1; one determined by the programmed voltage (voltage controls R2-R8), the second determined by the collector voltage of Q1 (negative feedback), and the third is from the positive side of the main rectifier. The collector current of Q1 is determined by the difference between its base and emitter inputs. This difference is an error voltage that is proportional to the difference between the programmed output voltage and the actual output voltage. The negative feedback from collector to base (C4, and R17-R18 in parallel) improves the stability of the voltage-regulating feedback loop.

4-18. The input from the positive side of the main rectifier (C1 and R1) improves loop stability by making the differential amplifier insensitive to output voltage variations of ten cps or greater. Below ten cps this input is negligible. This input is necessary because the phase shift of the pi-section output filter begins to become excessive over ten cps. Resistors R1 and R5 are arranged so that the ten cps input is isolated from the negative feedback input and so that necessary impedance levels are obtained looking out from the base of Q1. The collector output of Q1 is coupled to the gating circuit.

4-19. CLAMPING. In order to protect the differential amplifier, the base of Q1 is clamped with respect to -S by diodes CR1 and CR2 to prevent excessive base voltage in either direction. Diode CR1 clamps the base to approximately -0.7 vdc; CR2 and the base-emitter junction of Q1 clamp the base to approximately +1.4 vdc. Zener diode VR1 clamps the programming terminals to prevent an excessive error signal that would cause excessive output voltage. This would occur, for example, if the programming terminals were opened accidentally. To prevent overshoot when the power supply switches from constant current to constant voltage, diodes CR9 and CR10 clamp the collector of Q1. Resistor R10 provides a small bleed current for CR10.

4-20. CURRENT INPUT

4-21. GENERAL. The current input circuit is basically a differential amplifier (Q8-Q9) that detects any current difference between the programmed output current (proportional to voltage across current controls) and the actual output current (proportional to voltage across current monitoring resistor R13). The differential amplifier output voltage varies in proportion to the output current variation.

4-22. Q8-Q9 INPUT. The input to the differential amplifier (across bases of Q8-Q9) is the voltage difference across current controls P9-P11 and current monitoring resistor R13. Because the programming current is constant in constant current operation, the voltage input to the differential amplifier varies as the load current through R13 (error voltage). Capacitors C8 and C14 and resistor R11 provide gain roll-off at high frequencies. Diode CR16 clamps the voltage (0.7 vdc) across the emitter-base junction of Q9 and R10. This clamping action prevents excessive reverse base voltage in Q9 when very large load current is drawn (output terminals shorted). To prevent overshoot when the power supply switches from constant voltage to constant current operation, diodes CR10 and CR11 clamp the collector of Q8.

4-23. Q8-Q9 OUTPUT. Resistor R19 is the collector load for Q8. The collector output of Q8 is coupled to the gating circuit. Voltage divider R16-R46 biases the base of Q9 and maintains a slightly negative base bias to ensure that the output current can be programmed to zero. Resistor R44 provides positive feedback to improve load regulation during constant current operation.

4-24. GATING CIRCUIT

4-25. Transistor Q4 draws current from the SCR control circuit (capacitor C25). The magnitude of this current is determined by either the voltage or current input circuit. For constant voltage operation, diode CR7 is forward biased to permit the voltage input circuit to drive Q4; diode CR8 is reverse biased to inhibit the input from the current input circuit. For constant current operation, the reverse occurs.

4-26. To prevent transients in the dc output when the power supply is turned-on, the turn-on of Q4 is delayed by capacitor C2 which charges through R12, R15 and CR5. When C2 charges sufficiently to reverse bias CR5, all the current through R15 flows to the base of Q4 to turn it on. This base current is controlled by the voltage or current input circuits via CR7 or CR8, respectively. For example, during constant voltage operation the collector voltage of Q1 (voltage input) forward biases CR17 (CR8 reverse biased by Q8), the current through CR7 will vary as Q1 collector voltage varies and thus vary Q4 base current; therefore, the collector current of Q4 is controlled by the voltage input. In a similar manner, the current input circuit controls the collector current of Q4 during constant current operation.

4-27. TURN-ON CIRCUIT

4-28. Transistor Q3 provides a path for rapidly discharging C2 (in gating circuit) when the power supply is turned-off. This assures that C2 is discharged if the power supply is turned-on shortly after turn-off. The purpose of having C2 discharged each time the power supply is turned-on is to maintain the same time delay in the turn-on of the gating circuit (refer to para. 4-26).

4-29. SCR REGULATOR CONTROL (See waveshapes on figure 4-2.)

4-30. GENERAL. The SCR regulator control is basically a blocking oscillator (Q7 and T3) that applies pulses to the SCR regulator in response to error signals detected by the voltage or current input circuit. When transistor Q7 conducts, the pulse developed in winding 1-2 of transformer T3 is coupled to the base of Q7 (positive feedback) and to the SCR regulator (CR17 and CR18). Capacitor C27 charges in opposition to the feedback voltage and cuts off Q7. The charge time of C27 determines the pulse duration in the collector of Q7 (approximately 20 microseconds). The 35-vdc bias supplies current through R52, CR46, and CR44 to discharge C27 after Q7 stops conducting.

4-31. GATE INPUT. Throughout the operation of the blocking oscillator, capacitor C25 supplies most of the collector current for Q4 in the gating circuit (refer to para. 4-25). The amount of current pulled from C25 by Q4 is determined by the input (from the voltage or current input circuit) to the gating circuit. As a result of this current flow from C25, the voltage across C25 increases negatively with respect to the 6.0-vdc bias and has a waveshape that approximates a linear ramp. Thus, the slope of this ramp is determined by the voltage or current input circuit. Due to the time delay in the feedback loop, the slope of the ramp is constant for a half cycle of the ac input. The voltage on C25 is the emitter bias (forward bias when negative) for Q7 and therefore helps determine the point at which Q7 conducts.

4-32. AC INPUT. The ac input to transformer T2 is stepped-down and full-wave rectified by bridge rectifier CR39 through CR43. The output of the bridge rectifier is a negative-going pulsating dc (120 cps). Voltage divider R50-R51 supplies a portion of this pulsating dc through C27 to the base of Q7; thus, the base is reverse biased.

4-33. FIRING. A point is reached during each cycle of the 120-cps pulsating dc (each half cycle of the 60-cps ac input) when the reverse bias on the base and the forward bias (capacitor C25) on the emitter of Q7 are equal, and therefore Q7 has zero bias. As the ramp voltage across C25 goes more negative than the base voltage, the base-emitter junction of Q7 begins to become forward biased. When the emitter is more negative than the base by approximately 0.5 volts, Q7 conducts. The firing point of Q7 is therefore determined by both the dc output error and the line voltage change. Because Q7 saturates when it conducts, the collector voltage approximates a rectangular wave with a negative going pulse width of approximately 20 microseconds (determined by C27 and R51). The conduction of Q7 charges C25 in the positive direction (clamped by CR49). When Q7 stops conducting, the ramp across C25 begins again. However, Q7 is held cut-off by the charge on C27.

4-34. INITIAL CONDITIONS. At the beginning of each cycle of the 120-cps pulsating dc, certain initial conditions must be established on capacitors C25 and C27. When the negative-going pulsating dc is at the end of its cycle (C27 negatively charged earlier in the cycle by the feedback voltage), CR44 and CR45 become forward biased and current flows from the 35-vdc bias through R52, CR46, and CR44 to discharge C27 to approximately zero volts and through R52, CR46, and CR45 to charge C25 to approximately 0.7 volts (clamped by CR49). This discharge and charge occurs rapidly, so that it is completed before the next cycle begins and Q7 can conduct again. Diode CR47 provides another path for the current through CR44 so that the voltage to which C27 discharges remains predictable. As the negative-going pulsating dc increases in the next cycle, CR44 and CR45 become reverse biased.

4-35. BRIDGE RECTIFIER. At the zero cross-over region of the voltage waveform on secondary winding 3-4 of transformer T2, the voltage is insufficient to forward bias the rectifiers in the bridge. In order to maintain definition between the end of one cycle of the rectified output and the beginning of the next cycle, diode CR41 provides approximately 0.7 volts at the rectified output. The current for CR41 is supplied through CR46. As the voltage across the secondary winding moves away from the zero cross-over region, CR41 becomes reverse biased.

4-36. TRANSIENTS, DECOUPLING AND PROTECTION. Transients in the pulsating dc are reduced by R56 and C28. The base of Q7 is decoupled by C3. The voltage spike in the collector of Q7, induced by secondary winding 1-2 of transformer T3 when Q7 cuts-off, is clamped by CR48. The collector is decoupled by R53 and C26.

4-37. SCR REGULATOR

4-38. GENERAL. The SCR regulator (CR17 and CR18) controls the ac input voltage and current to main power transformer T1 in response to the voltage and current error signals. In constant voltage operation, the ac input voltage to T1 is adjusted so that the output voltage remains constant with changing loads. In constant current operation, the ac input current to T1 is adjusted so that the output current remains constant with changing loads and the output voltage is allowed to vary.

4-39. GATING. Each half cycle of the ac input, either CR17 or CR18 is forward biased. The pulse induced in secondary windings 5-6 and 7-8 of T3 by the SCR control, turns on the SCR that is forward biased when the pulse occurs. The other SCR is not affected by the gate pulse because it is reverse biased. A gate pulse occurs each half cycle of the ac input, unless the output is open. The timing of the gate pulse with respect to the ac input is determined by the error in the dc output via the loop action.

4-40. AC INPUT CONTROL. When an SCR is gated on, it conducts until its anode-to-cathode voltage goes to approximately zero. Thus, the earlier an SCR is gated on, the greater the portion of the ac input that will be applied to T1. Because of the leakage inductance of T1, the conduction of an SCR may extend into the next half cycle. The conduction period may be shortened at high output by the voltage across capacitor C13 through C16 being reflected back into the primary. By controlling the ac input to T1 each half cycle, the average value of the voltage or current at the output of bridge rectifier CR19 through CR21 is adjusted so that dc output voltage or current is maintained constant.

4-41. PROTECTION. Diodes CR50 and CR51 prevent anode induced reverse gate currents from being fed back to the control circuit. Resistors R54 and R55 limit current in the SCR gates.

4-42. BIAS AND REFERENCE CIRCUIT

4-43. GENERAL. The bias and reference circuit supplies three voltages (+35, +6.0, and -19.5 vdc) for internal power supply operation, and maintains the programming currents constant. The +35 vdc is not regulated. The -19.5 vdc, +6.0 vdc, and the programming currents are regulated.

4-44. +35 AND +6.0 VDC. The output of secondary winding 5-6 of transformer T1 is full-wave rectified by CR30 and CR31. Capacitors C20 and C21 each charge to the peak rectified voltage (voltage doubling). The +6.0 vdc (with respect to -S) is maintained by diodes CR6 and CR14 and by zener diode VR4. The +35 vdc includes includes the +6.0 vdc and the voltage across C21. The +6.0 vdc and the negative voltage across C20 provide the unregulated input to the -19.5 vdc regulator.

4-45. -19.5 VDC. For the -19.5 vdc, transistor Q10 is the error detector/amplifier. Zener diode VR3 and diode CR27 provide a reference voltage at the emitter of Q10. Voltage divider R35-R36 supplies an error voltage to the base of

Q10 which amplifies and applies it to the base of series regulator Q11. The base drive of Q11 adjusts the voltage across Q11 as required to compensate for the error in the -19.5 vdc. Resistor R37 sets the optimum current through temperature-compensated zener diode VR3. Resistor R45 improves the line regulation. Resistor R56 reduces power dissipation in Q11. Capacitor C22 stabilizes the loop.

4-46. PROGRAMMING CURRENTS. Each programming current is held constant in a similar manner. The voltage across emitter resistors R38 and R40 is held constant by VR3, CR27, and the base-emitter drop of each transistor. Thus, the emitter current in each transistor is constant and therefore the collector currents are nearly constant. The collector currents of Q5 and Q6 are the constant voltage and constant current programming currents, respectively. Resistors R39 and R41 are used for trimming. Resistors R42 and R43 are collector loads. Diode CR28 clamps the collector of Q5 to protect against excessive positive voltage (breakdown) which might occur if the voltage controls are reduced to zero rapidly (positive dc output voltage would appear at collector).

Table 5-1. Test Equipment

Type	Required Characteristics	Use	Recommended Model
Differential Voltmeter	Sensitivity: 1 mv full scale (min.) Input impedance: 10 megohms	Measure regulation and dc voltages; calibrate meters	HP 741A (See note 1)
AC Voltmeter	Accuracy: 2% Sensitivity: 10 mv full scale (min.)	Measure ac voltages and ripple	HP 403B
Variable Voltage Transformer	Range: 90-130 volts Equipped with voltmeter accurate within 1 volt	Vary and measure ac input voltage	-------
Oscilloscope	Sensitivity: 50mv/cm (min.) Differential input	Measure ripple and transient response	HP 130C
Battery	120 vdc	Measure transient response	-------
Switch	2.5-ampere capacity	Transient response; Constant current load regulation;	-------
Resistor	48 ohm, ±5%, 300 w	Load resistor	Rex Rheostat (See note 2)
Resistor	1 ohm ± 1% 40 watt, 4 terminals	Current monitoring	--------
Resistor	1,000 ohms, ±1%, 2 w non-inductive	Measure impedance	-------
Resistor	1,000 ohms ±5%, 10 w	Measure impedance	-------
Capacitor	500 µfd, 50 vdcw	Measure impedance	-------
Oscillator	Range: 1 cps to 100 kc Accuracy: 2% Output: 10 vrms	Measure impedance	HP 202C

Table 5-1. Test Equipment (cont.)

Type	Required Characteristics	Use	Recommended Model
Controlled-temperature oven	Range: 0-50°C	Measure temperature stability	-------
Resistance box	Range: 0-36,000 ohms Accuracy: 0.1% plus 1 ohm Make-before-break contacts	Measure programming coefficients	H-Lab 6931A

NOTE 1

A satisfactory substitute for a differential voltmeter is to arrange a reference voltage source and null detector as shown in figure 5-1. The reference voltage source is adjusted so that the voltage difference between the supply being measured and the reference voltage will have the required resolution for the measurement being made. The voltage difference will be a function of the null detector that is used. For measurements at the base of transistor Q4, a null detector with input impedance of 10 megohms or greater is required. Otherwise, satisfactory null detectors are: HP 405AR digital voltmeter, HP412A dc voltmeter, HP 419A null detector, a dc coupled oscilloscope utilizing differential input, or a 50 mv meter movement with a 100 division scale. A 2 mv change in voltage will result in a meter deflection of four divisions.

CAUTION

Care must be exercised when using an electronic null detector in which one input terminal is grounded to avoid ground loops and circulating currents.

NOTE 2

To obtain 48 ohms, connect rheostat across output terminals, turn front-panel CURRENT controls fully clockwise (maximum), adjust front-panel VOLTAGE controls for 120 vdc and adjust rheostat until output current is 2.5 amperes.

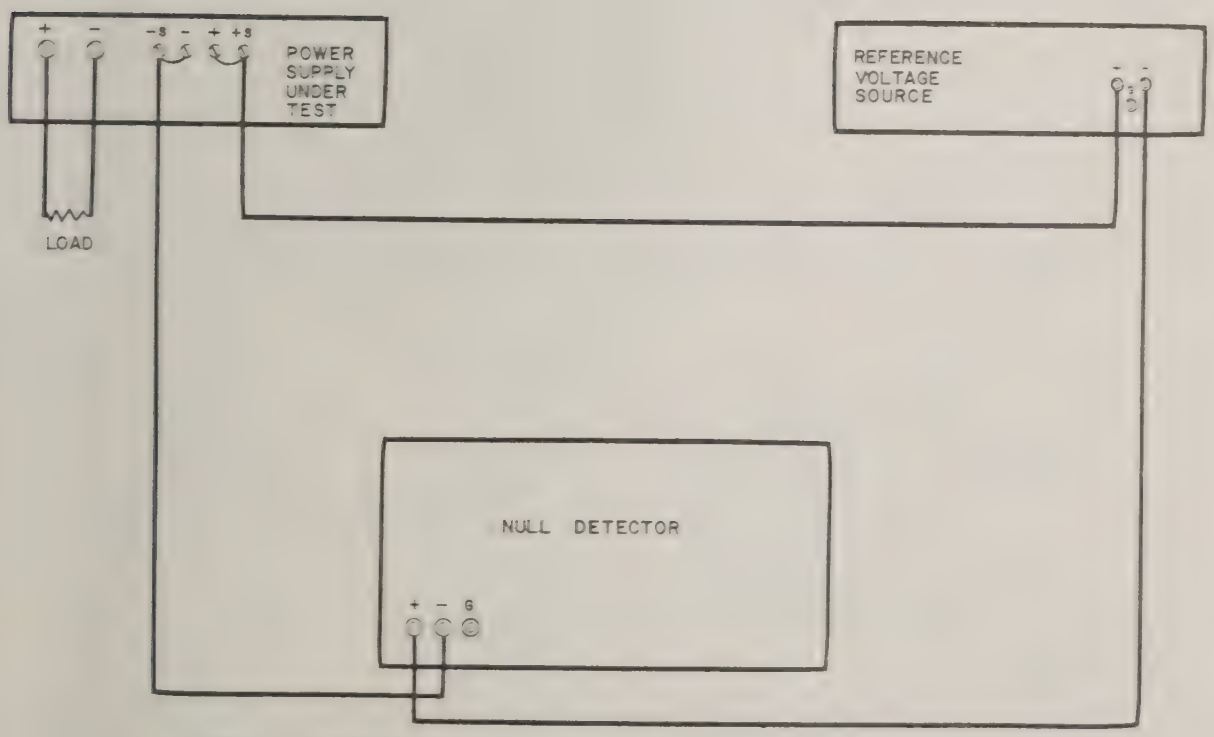

FIGURE 5-1. DIFFERENTIAL VOLTMETER SUBSTITUTE, TEST SETUP

SECTION V

MAINTENANCE

5-1. GENERAL

5-2. Table 5-1 lists the type of test equipment, its required characteristics, its use, and a recommended model for performing the instructions given in this section. Upon receipt of the power supply, the performance check (para. 5-7) should be made. This check is suitable for incoming inspection. Additional specification checks are given in paragraphs 5-24 through 5-36. If a fault is detected in the power supply while making the performance check or during normal operation, proceed to the troubleshooting procedures (para. 5-39). After troubleshooting and repair (para. 5-50), perform any necessary adjustments and calibrations (para. 5-51). Before returning the power supply to normal operation, repeat the performance check to ensure that the fault has been properly corrected and that no other faults exist. Before doing any maintenance checks, turn-on power supply, allow a half-hour warm-up, and read the measurement techniques (para. 5-3).

5-3. MEASUREMENT TECHNIQUES

5-4. A measurement made across the load includes the effect of the impedance of the leads connecting the load; these leads can have an impedance several orders of magnitude greater than the output impedance of the power supply. When measuring the output voltage of the power supply, use the -S and +S terminals.

5-5. For output current measurements, the current monitoring resistor should be a four-terminal resistor. The four terminals are connected as shown in figure 5-2.

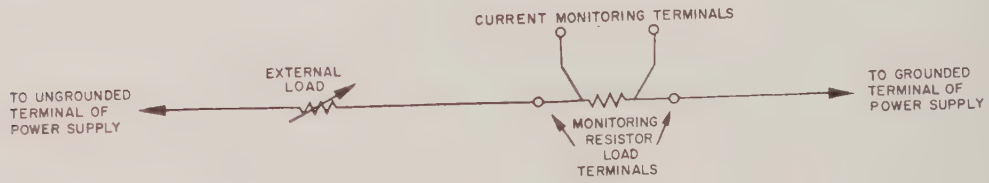
CURRENT MONITORING TERMINALS
EXTERNAL LOAD
TO UNGROUNDED TERMINAL OF POWER SUPPLY
TO GROUNDED TERMINAL OF POWER SUPPLY
MONITORING RESISTOR LOAD TERMINALS

Figure 5-2. Output Current Measurement Technique

5-6. When using an oscilloscope, ground one terminal of the power supply and ground the case at the same ground point. Make certain that the case is not also grounded by some other means (power line). Connect both oscilloscope input leads to the power supply ground terminal and check that the oscilloscope is not exhibiting a ripple or transient due to ground loops, pick-up, or other means.

5-7. PERFORMANCE CHECK

5-8. GENERAL

5-9. The performance check is made using a 115-volt, 60-cps, single-phase input power source. The performance check is normally made at a constant ambient room temperature. The temperature range specification can be verified by doing the performance check at a controlled temperature of 0°C and at a controlled temperature of 50°C. If the correct result is not obtained for a particular check, do not adjust any controls; proceed to troubleshooting (para. 5-39).

5-10. RATED OUTPUT AND METER ACCURACY

5-11. CONSTANT VOLTAGE. Proceed as follows:

a. Connect the 48 -ohm load resistor across the output terminals and the differential voltmeter across the -S and +S terminals.

b. Turn front-panel CURRENT controls fully clockwise (maximum).

c. Turn front-panel VOLTAGE controls until front-panel voltmeter indicates 120.0 vdc.

d. The differential voltmeter should indicate 120.0 ± 2.4 vdc.

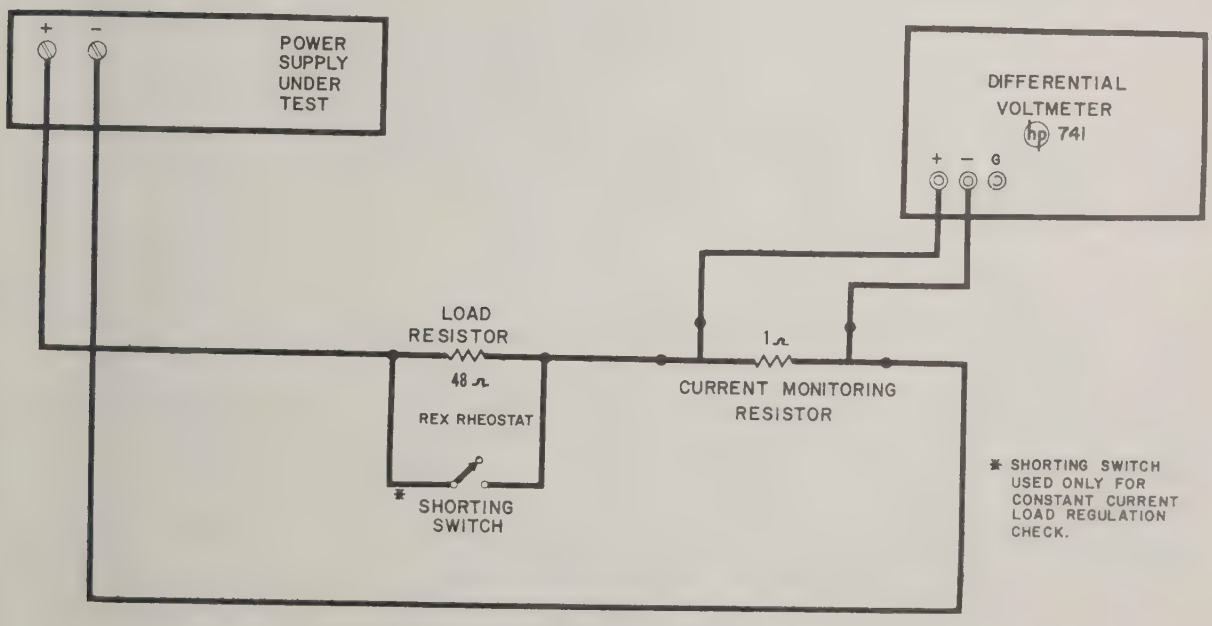

FIGURE 5-3. CONSTANT CURRENT TEST-SETUP

5-12. CONSTANT CURRENT. Proceed as follows:

a. Connect test setup shown in figure 5-3.

b. Turn front-panel VOLTAGE controls fully clockwise (maximum).

c. Turn front-panel CURRENT controls until front-panel ammeter indicates 2.5 amperes.

d. The differential voltmeter should indicate 2.5 ± 0.05 vdc.

5-13. LINE REGULATION

5-14. CONSTANT VOLTAGE. Proceed as follows:

a. Connect the 48-ohm load resistor across the output terminals and the differential voltmeter across the -S and +S terminals.

b. Turn front-panel CURRENT controls fully clockwise (maximum).

c. Connect the variable voltage transformer between the input power source and the power supply power input. Adjust the variable voltage transformer to 105 vac.

d. Turn front-panel VOLTAGE controls until the differential voltmeter indicates 120.0 vdc.

e. Adjust the variable voltage transformer to 125 vac.

f. Differential voltmeter indication should change by less than 60 mvdc.

5-15. CONSTANT CURRENT. Proceed as follows:

a. Connect test setup shown in figure 5-3.

b. Turn front-panel VOLTAGE controls fully clockwise (maximum).

c. Connect the variable voltage transformer between the input power source and the power supply power input. Adjust the variable voltage transformer to 105 vac.

d. Turn front-panel CURRENT controls until front-panel ammeter indicates 2.5 amperes.

e. Record voltage indicated on differential voltmeter

f. Adjust the variable voltage transformer to 125 vac.

g. Differential voltmeter indication should change by less than 25 mvdc.

5-16. LOAD REGULATION

5-17. CONSTANT VOLTAGE. Proceed as follows:

a. Connect the 48 -ohm load resistor across the output terminals and the differential voltmeter across the -S and +S terminals.

b. Turn front-panel CURRENT controls fully clockwise (maximum).

c. Turn the front-panel VOLTAGE controls until front-panel ammeter indicates 2.5 amperes.

d. Record voltage indicated on differential voltmeter.

e. Disconnect load resistor.

f. Differential voltmeter indication should change by less than 120 mvdc.

5-18. CONSTANT CURRENT. Proceed as follows:

a. Connect test setup shown in figure 5-3.

b. Turn front-panel VOLTAGE controls fully clockwise (maximum).

c. Turn front-panel CURRENT controls until front-panel ammeter indicates 2.5 amperes.

d. Record voltage indicated on differential voltmeter.

e. Close the shorting switch.

f. Differential voltmeter indication should change by less than 25 mvdc.

5-19. RIPPLE AND NOISE

5-20. Proceed as follows:

a. Connect the 48 -ohm load resistor across the output terminals and the ac voltmeter across the -S and +S terminals.

b. Turn front-panel CURRENT controls fully clockwise (maximum).

c. Connect the variable voltage transformer between the input power source and the power supply power input. Adjust the variable voltage transformer to 115 vac.

d. Turn front-panel VOLTAGE controls until front-panel ammeter indicates 2.5 amperes.

e. The ac voltmeter should indicate less than 240 mvrms.

5-21. TRANSIENT RECOVERY TIME

5-22. Proceed as follows:

a. Connect test setup shown in figure 5-4.

b. Turn front-panel CURRENT controls fully clockwise (maximum).

c. Turn front-panel VOLTAGE controls until front-panel ammeter indicates 2.5 amperes.

d. Open and close the switch several times and observe the oscilloscope display.

e. Oscilloscope display should be as shown in figure 5-5.

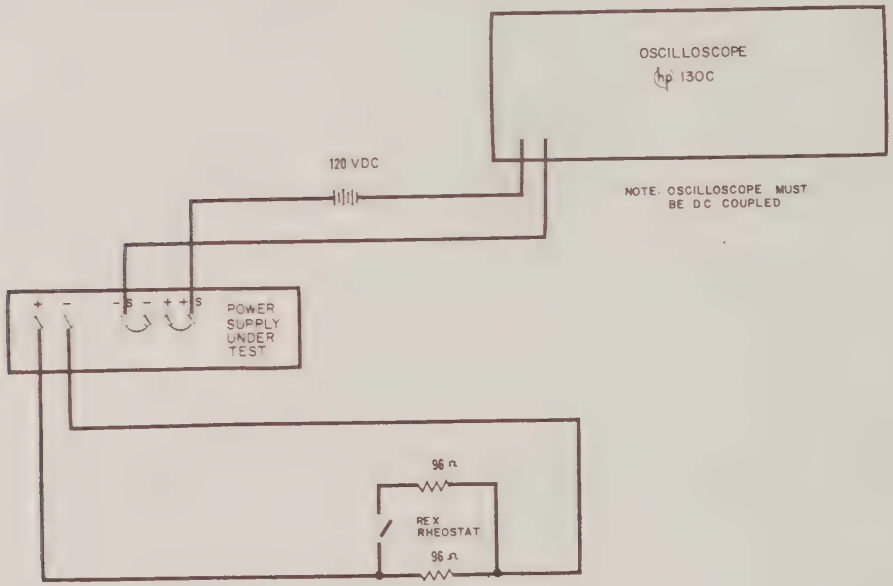

FIGURE 5-4 TRANSIENT RECOVERY TIME, TEST SETUP

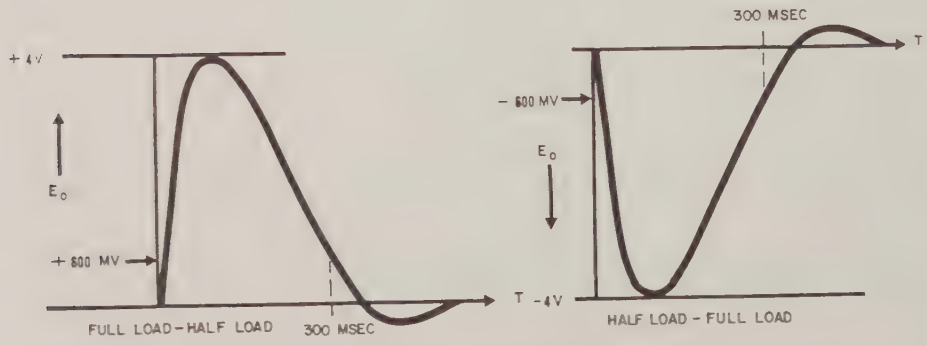

FIGURE 5-5. TRANSIENT RECOVERY TIME, WAVEFORM

5-23. ADDITIONAL SPECIFICATION CHECK

5-24. TEMPERATURE COEFFICIENT

5-25. CONSTANT VOLTAGE. Proceed as follows:

a. Connect the 48 -ohm load resistor across the output terminals and the differential voltmeter across the -S and +S terminals.

b. Turn front-panel CURRENT controls fully clockwise (maximum).

c. Turn front-panel VOLTAGE controls until the differential voltmeter indicates 120 vdc.

d. Insert the power supply into the controlled-temperature oven (differential voltmeter and load remain outside oven). Set the temperature to 30°C and allow a half-hour warm-up.

e. Record the differential voltmeter indication.

f. Raise the temperature to 40°C and allow a half-hour warm-up.

g. Differential voltmeter indication should change by less than 900 mvdc. from indication recorded in step e.

5-26. CONSTANT CURRENT. Proceed as follows:

a. Connect test setup shown in figure 5-3.

b. Turn front-panel VOLTAGE controls fully clockwise (maximum).

c. Turn front-panel CURRENT controls until the differential voltmeter indicates 2.5 vdc.

d. Insert the power supply into the controlled-temperature oven (differential voltmeter and load remain outside oven). Set the temperature to 30°C and allow a half-hour warm-up.

e. Record the differential voltmeter indication.

f. Raise the temperature to 40°C and allow a half-hour warm-up.

g. Differential voltmeter indication should change by less than 80 mvdc from indication recorded in step e.

5-27. OUTPUT STABILITY

5-28. CONSTANT VOLTAGE. Proceed as follows:

a. Connect the 48-ohm load resistor across the output terminals and the differential voltmeter across the -S and +S terminals.

b. Turn front-panel CURRENT controls fully clockwise (maximum).

c. Turn front-panel VOLTAGE controls until the differential voltmeter indicates 120 vdc.

d. allow a half-hour warm-up and then record the differential voltmeter indication.

e. After eight hours, the differential voltmeter indication should change by less than 270 mvdc from indication recorded in step d.

5-29. CONSTANT CURRENT. Proceed as follows:

a. Connect test setup shown in figure 5-3.

b. Turn front-panel VOLTAGE controls fully clockwise (maximum).

c. Turn front-panel CURRENT controls until the differential voltmeter indicates 2.5 vdc.

d. Allow a half-hour warm-up and then record the differential voltmeter indication.

e. After eight hours, the differential voltmeter indication should change by less than 25 mvdc.

5-30. REMOTE PROGRAMMING

5-31. CONSTANT VOLTAGE. Proceed as follows:

a. Turn-off power supply and arrange rear terminal strapping pattern for constant voltage remote programming as shown in figure 3-4; use the resistance box (set to 15,000 ohms) for the remote programming resistance. (Refer to para. 3-17 through 3-21.)

b. Connect the 48-ohm load resistor across the output terminals and the differential voltmeter across the -S and +S terminals.

c. Turn front-panel CURRENT controls fully clockwise (maximum).

d. Turn-on power supply, allow a half-hour warm-up and then record the differential voltmeter indication.

e. Increase the remote programming resistance in 300-ohm steps to 18,000 ohms; record the differential voltmeter indication at each step. The voltage indication should increase 1.0 ±0.01 vdc at each step.

f. Set the remote programming resistance to 33,000 ohms and repeat step e until the remote programming resistance reaches 36,000 ohms.

g. Turn-off power supply and reconnect normal strapping pattern (figure 3-2).

5-32. CONSTANT CURRENT. Proceed as follows:

a. Turn-off power supply and arrange rear terminal strapping pattern for constant current remote resistance programming as shown in figure 3-6: use the resistance box (set to 50 ohms) for the remote programming resistance. (Refer to para. 3-18 and 3-23 through 3-25.)

b. Connect test setup shown in figure 5-3.

c. Turn front-panel VOLTAGE controls fully clockwise (maximum).

d. Turn-on power supply, allow a half-hour warm-up and then record the differential voltmeter indication.

e. Increase the remote programming resistance in 25-ohm steps to 100 ohms; record the differential voltmeter indication at each step. The voltage indication should increase 250 $\pm$ 25 mvdc, at each step.

f. Set the remote programming resistance to 200 ohms and repeat step e until the remote programming resistance reaches 250 ohms.

g. Turn-off power supply and reconnect normal strapping pattern (figure 3-2).

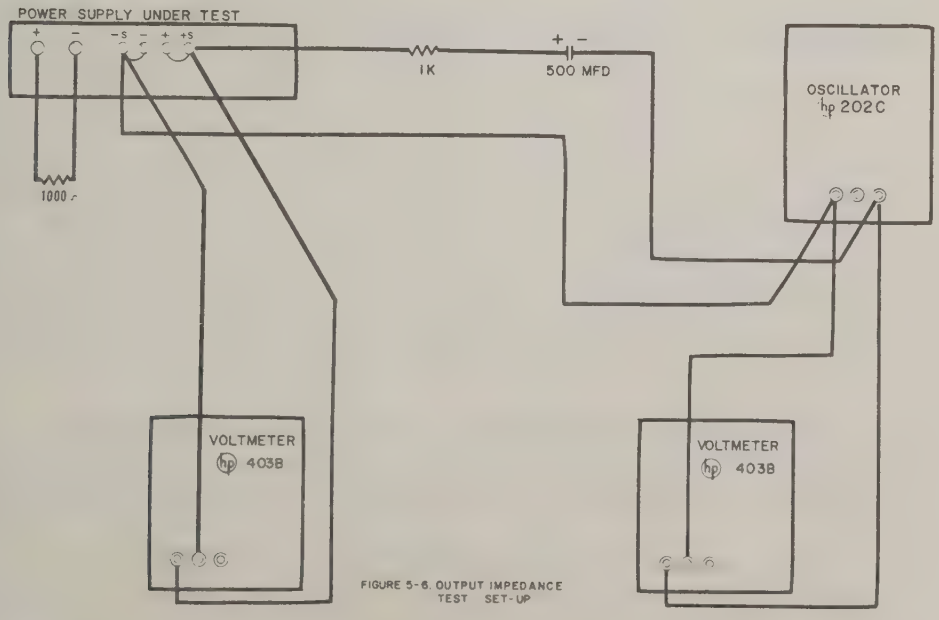

FIGURE 5-6. OUTPUT IMPEDANCE TEST SET-UP

5-33. OUTPUT IMPEDANCE

5-34. Proceed as follows:

a. Connect test setup shown in figure 5-6.

b. Turn front-panel CURRENT controls fully clockwise (maximum).

c. Turn front-panel VOLTAGE controls until front-panel voltmeter indicates 30 vdc.

d. Adjust the oscillator for a 10-vrms (E_{in}), 0.5-cps output.

e. Calculate and record the output impedance using the following formula:

$$Z_{out} = E_o R/(E_{in}-E_o)$$

R = 1,000 ohms; E_o measured across power supply -S and +S terminals using ac voltmeter; E_{in} measured across oscillator output terminals using the ac voltmeter.

f. Using the formula given in step e, calculate and record the output impedance for oscillator frequencies of 100 cps, 1 kc, and 100 kc.

g. The output impedance calculated and recorded in steps e and f should fall into the following ranges:

(1) dc to 0.5 cps; less than 0.1 ohm

(2) 0.5 cps to 100 cps; less than 2.0 ohm

(3) 100 cps to 1 kc; less than 0.5 ohm

(4) 1 kc to 100 kc; less than 4.0 ohm

5-35. OUTPUT INDUCTANCE

5-36. Proceed as follows:

a. Repeat steps a through c of para. 5-34.

b. Adjust the oscillator for a 10-vrms (E_{in}), 10-kc output.

c. Calculate and record the output inductance using the following formula:

$$L = X_l/2\pi f$$

X_1 is the output impedance (Z_{out}) calculated in steps e and f of paragraph 5-34; **f** is the frequency of the oscillator (determines which Z_{out} is used).

NOTE

The equation assumes tha $X_1 \gg R_{out}$ and therefore $X_1 = Z_{out}$.

d. Using the formula given in step c, calculate and record the output inductance for oscillator frequencies of 50 kc and 100 kc at 10 vrms.

e. The output inductance calculated in steps c and d should not exceed 2.0 microhenry.

5-37. COVER REMOVAL

5-38. The top and bottom covers are removed by removing both sets of six attaching screws.

5-39. TROUBLESHOOTING

5-40. GENERAL

5-41. If a fault in the power supply is suspected, remove the covers (para. 5-38) and visually inspect for broken connections, burned components, etc. If the fault is not detected visually, proceed to trouble analysis (para. 5-42). If the fault is detected visually or via trouble analysis, correct it and then do the performance check (para. 5-7). If a part is replaced, refer to repair and replacement (para 5-50) and to adjustments and calibrations (para. 5-51).

5-42. TROUBLE ANALYSIS

5-43. GENERAL. Before attempting trouble analysis, a good understanding of the principles of operation should be acquired by reading Section IV of this manual. Once the principles of operation are understood, logical application of this knowledge in conjunction with significant waveforms (on figure 4-2) and with normal voltage information (table 5-2) should suffice to isolate a fault to a part or small group of parts. As additional aids, the following are given:

a. Procedure for checking the bias and reference circuit. (Refer to para. 5-45.) Trouble in this circuit could show up in many ways because it supplies internal operating voltages for the power supply and the programming currents.

b. Procedures for checking the voltage feedback loop for the two most common troubles; high or low output voltage (para. 5-46 or 5-47, respectively).

c. Paragraph 5-48 which discusses common troubles.

5-44. A defective part should be replaced (refer to the parts list in Section VI). Test points called out in the procedures are identified on the schematic diagram (figure 4-2).

5-45. BIAS AND REFERENCE CIRCUIT. Proceed as follows:

a. Make an ohmmeter check to be certain that neither the positive nor negative terminal is grounded.

b. Turn front-panel VOLTAGE and CURRENT controls fully clockwise (maximum).

c. Turn-on power supply (no load connected).

d. Using the ac voltmeter, check voltage across secondary winding 5-6 of transformer T2. If voltage indication is not 23 ±1.5 vrms, transformer T2 may be defective.

e. Using the differential voltmeter, proceed as instructed in table 5-3.

5-46. HIGH OUTPUT VOLTAGE. Proceed as follows:

a. Turn front-panel CURRENT controls fully clockwise (maximum).

b. Turn front-panel VOLTAGE controls to mid-position.

c. Turn-on power supply (no load connected).

d. Using the ac voltmeter, check voltage across test points ACC and 45. If voltage indication is less than 1.0 vac, CR17 or CR18 may be shorted.

e. Using the differential voltmeter, check voltage across test points 33 and 36. If voltage is not 0.8 ±0.12 vdc, check T2, CR39 through CR43, R50, and R51.

f. Using the differential voltmeter, proceed as instructed in table 5-4.

5-47. LOW OUTPUT VOLTAGE. Proceed as follows:

a. Turn front-panel CURRENT controls fully clockwise (maximum).

b. Disconnect anode or cathode of diode CR8.

c. Turn-on power supply (no load connected).

d. Turn front-panel VOLTAGE controls clockwise and observe the front-panel voltmeter to see if the 120 vdc output can be obtained. If it can, the probable cause of the low output voltage is one or more of the following:

(2) Q8 shorted.

(3) Q9 open.

(4) Q6 open.

(5) R40, R43 open.

e. If the 120 vdc output cannot be obtained in step d, reconnect diode CR8 and turn the front-panel VOLTAGE controls to mid-position.

f. Using the oscilloscope, check the following:

(1) Waveform across test points 31 (positive lead) and 33 (waveform on figure 4-2). If peak negative voltage is less than 15 volts, Q7, R53, CR48, C25, C26, or transformer T3 may be defective.

(2) Ripple waveform across test points 18 (positive lead) and 48 (waveform shown on figure 4-2). If waveform is correct (except for amplitude), proceed to step (3). If waveform is incorrect, proceed as follows:

(a) If the ripple waveform is half-wave (60 cps) instead of full-wave (120 cps), either SCR (CR17 or CR18) may be open or the applicable gate circuit for the SCR may be defective. To check the gate circuit, disconnect R54 or R55 (as applicable) and make an ohmmeter check from the open end of the resistor to test point ACC or 45 (as applicable). If the resistance is greater than 55 ohms, the gate circuit is defective.

(b) If there is no ripple waveform, both CR17 and CR18 may be open or T1 may be defective.

g. Using the differential voltmeter, proceed as instructed in table 5-5.

5-48. COMMON TROUBLES. Table 5-6 gives the symptoms, checks, and probable causes for common troubles. The checks should be made using a 115-volt, 60-cps, single-phase power input and the test equipment listed in table 5-1.

5-49. REPAIR AND REPLACEMENT

5-50. Before servicing etched circuit boards, refer to figure 5-7. After replacing a semiconductor device, refer to table 5-7 for checks and adjustments that may be necessary. If a check indicates a trouble, refer to paragraph 5-39. If an adjustment is necessary, refer to paragraph 5-51.

SERVICING ETCHED CIRCUIT BOARDS

Excessive heat or pressure can lift the copper strip from the board. Avoid damage by using a low power soldering iron (50 watts maximum) and following these instructions. Copper that lifts off the board should be cemented in place with a quick drying acetate base cement having good electrical insulating properties.

A break in the copper should be repaired by soldering a short length of tinned copper wire across the break.

Use only high quality rosin core solder when repairing etched circuit boards. NEVER USE PASTE FLUX. After soldering, clean off any excess flux and coat the repaired area with a high quality electrical varnish or lacquer.

When replacing components with multiple mounting pins such as tube sockets, electrolytic capacitors, and potentiometers, it will be necessary to lift each pin slightly, working around the components several times until it is free.

WARNING: If the specific instructions outlined in the steps below regarding etched circuit boards without eyelets are not followed, extensive damage to the etched circuit board will result.

1. Apply heat sparingly to lead of component to be replaced. If lead of component passes through an eyelet in the circuit board, apply heat on component side of board. If lead of component does not pass through an eyelet, apply heat to conductor side of board.

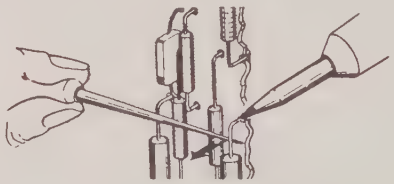

2. Reheat solder in vacant eyelet and quickly insert a small awl to clean inside of hole. If hole does not have an eyelet, insert awl or a #57 drill from conductor side of board.

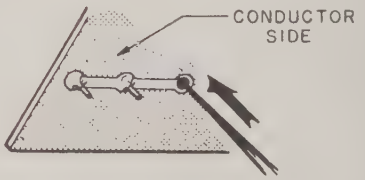

3. Bend clean tinned leads on new part and carefully insert through eyelets or holes in board.



4. Hold part against board (avoid overheating) and solder leads. Apply heat to component leads on correct side of board as explained in step 1.

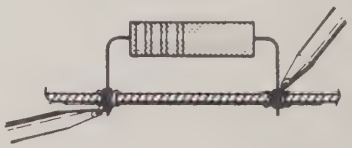

In the event that either the circuit board has been damaged or the conventional method is impractical, use method shown below. This is especially applicable for circuit boards without eyelets.

1. Clip lead as shown below.

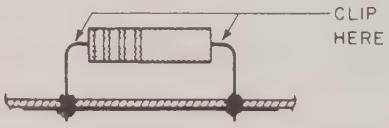

2. Bend protruding leads upward. Bend lead of new component around protruding lead. Apply solder using a pair of long nose pliers as a heat sink.

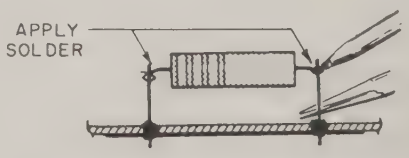

This procedure is used in the field only as an alternate means of repair. It is not used within the factory.

Figure 5-7. Servicing Etched Circuit Boards

5-51. ADJUSTMENTS AND CALIBRATIONS

5-52. GENERAL

5-53. Adjustments and calibrations may be required after performance testing (para. 5-7), additional specification testing (para. 5-23), troubleshooting (para. 5-39), or repair and replacement (para. 5-50). Test points called out in the procedures are identified on the schematic diagram (figure 4-2). If an adjustment or calibration cannot be performed, troubleshooting is required. Table 5-8 summarizes the adjustments and calibrations. The adjustments and calibrations are performed using a 115-volt, 60-cps, single-phase power input to the power supply.

5-54. METER ZERO

5-55. Proceed as follows:

a. Turn-off power supply and allow 2 minutes for all capacitors to discharge.

b. Rotate voltmeter zero-set screw (figure 3-1) clockwise until the meter pointer is to the right of zero and moving to the left towards zero. Stop when pointer is on zero. If the pointer overshoots zero, continue rotating clockwise and repeat this step.

c. When the pointer is exactly on zero, rotate the zero-set screw counterclockwise approximately 15 degrees to free the screw from the meter suspension. If pointer moves, repeat steps a through c.

d. Repeat steps a through c for the ammeter.

5-56. VOLTMETER TRACKING

5-57. Proceed as follows:

a. Connect the differential voltmeter across the -S and +S terminals.

b. Turn front-panel VOLTAGE controls until the differential voltmeter indicates 120 vdc.

c. Adjust R25 until the front-panel voltmeter indicates 120 vdc.

5-58. AMMETER TRACKING

5-59. Proceed as follows:

a. Connect test setup shown in figure 5-3.

b. Turn front-panel VOLTAGE controls fully clockwise (maximum).

c. Turn front-panel CURRENT controls until the differential voltmeter indicates 2.5 vdc.

d. Adjust R27 until the front-panel ammeter indicates 2.5 amperes.

5-60. CONSTANT VOLTAGE PROGRAMMING CURRENT

5-61. Proceed as follows:

a. Connect a 36,000-ohm, 0.1%, 1/2 w resistor between terminals +S and A6 on the rear terminal strip of the power supply.

b. Disconnect the jumper between terminals A6 and A7.

c. Connect the resistance box in place of R39 (shunt).

d. Connect the differential voltmeter between the +S and -S terminals.

e. Adjust the resistance box until the differential voltmeter indicates 120 ±0.6 vdc.

f. Choose resistor R39 (shunt) equal to the resistance required in step e.

5-62. ZERO VOLTAGE OUTPUT

5-63. Proceed as follows:

a. Connect a jumper between the +S and A7 terminals on the rear terminal strip of the power supply.

b. Connect the differential voltmeter between the +S and -S terminals.

c. Connect the resistance box in place of R6.

d. Adjust the resistance box so that the voltage indicated by the differential voltmeter is between zero and ±10 mvdc.

e. Choose resistor R6 equal to the resistance value required in step d.

5-64. CONSTANT CURRENT PROGRAMMING CURRENT

5-65. Proceed as follows:

a. Connect test setup shown in figure 5-3.

b. Connect a 250-ohm, 0.1%, 1/2w resistor between terminals A2 and A3 on the rear terminal strip of the power supply.

c. Disconnect the jumper between terminals A1 and A2.

d. Connect the resistance box in place of R41 (shunt)

e. Adjust the resistance box until the differential voltmeter indicates 2.5 ± 0.25 vdc.

f. Choose resistor R41 (shunt) equal to the resistance value required in step e.

5-66. ZERO CURRENT OUTPUT

5-67. Proceed as follows:

a. Connect test setup shown in figure 5-3.

b. Connect a jumper between the A1 and A3 terminals on the rear terminal strip of the power supply.

c. Connect the resistance box in place of R20.

d. Adjust the resistance box until the voltage indicated by the differential voltmeter is between zero and 5.0mvdc.

e. Choose resistor R20 equal to the resistance value required in step d.

NOTE

If the resistance value required is less than 7,000 ohms or greater than 17,000 ohms, change R46. Replace the original R20.

5-68. BIAS AND REFERENCE LINE REGULATION

5-69. Proceed as follows:

a. Connect the variable voltage transformer between the input power source and the power supply power input. Adjust the variable voltage transformer to 105 vac.

b. Connect the differential voltmeter between the +S and -S terminals.

c. Connect the resistance box in place of R45.

d. Turn front-panel VOLTAGE controls until the differential voltmeter indicates 120 vdc.

e. Adjust the variable voltage transformer to 125 vac.

f. Adjust the resistance box until the voltage indicated by the differential voltmeter is within 60 mvdc of 120 vdc.

g. Choose resistor R45 equal to the resistance value required in step f.

NOTE

If the resistance value required is less than 20,000 ohms, troubleshooting is required. Replace the original R45.

5-70. LINE IMBALANCE

5-71. Proceed as follows:

a. Connect the 48 -ohm load resistor across the output terminals.

b. Turn front-panel CURRENT controls fully clockwise (maximum).

c. Connect the variable voltage transformer between the input power source and the power supply power input. Adjust the variable voltage transformer to 125 vac.

d. Turn front-panel VOLTAGE controls until front-panel ammeter indicates 2.5 amperes.

e. Connect the oscilloscope across test points 18 and 48. Use internal sync.

f. Connect the resistance box in place of R17.

g. Adjust the resistance box until the oscilloscope display is similar to the waveform for test points 18-48 shown on figure 4-2.

h. Choose resistor R17 equal to the resistance value required in step f.

NOTE

If the resistance value required is less than 5,000 ohms, troubleshooting is required. Replace the original R17.

5-72. CONSTANT CURRENT LOAD REGULATION

5-73. Proceed as follows:

a. Perform steps a through e of para. 5-18.

b. Place a 10-megohm resistor in place of R44.

c. Adjust the variable voltage transformer to 105 vac.

d. Close the shorting switch.

e. Differential voltmeter indication should change by less than 25 mvdc. If voltage change is greater than 25 mvdc, reduce the 10-megohm resistor to 9 megohms, set the variable voltage transformer to 105 vac, open the shorting switch, record the differential voltmeter indication, and repeat steps c and d. Repeat this process, reducing the 10-megohm resistor in 1-megohm steps until the voltmeter change is less than 25 mvdc. Changes smaller than 1-megohm may be required to obtain the optimum resistance value for R44. Choose resistor R44 equal to the optimum resistance value required.

NOTE

If the resistance value required is less than 1 megohm, troubleshooting is required. Replace the original R44.

Table 5-2. Normal Voltage

From (+)	to (-)	Voltage	Typical Peak-to-Peak Values
-S	51	19.5 ±1.0 vdc	0.05 v
33	27	34.1 ±1.7 vdc	1.0 v
33	-S	6.0 ±0.3 vdc	0.1 v
40	33	33.0 ±1.7 vdc	0.6 v
24	51	10.3 ±0.6 vdc	---
22	51	9.7 ±0.5 vdc	---
21	51	9.7 ±0.5 vdc	---
23	22	7.1 ±0.7 vdc	---
20	21	3.1 ±0.3 vdc	---
39	38	0.81 ±0.1 vdc	---
51	27	6.6 ±2.0 vdc	1.0 v
33	12	3.7 ±0.6 vdc	---
26	27	0.59 ±0.1 vdc	---
-S	25	10.0 ±0.5 vdc	---
18	48	124.0 ±1.0 vdc	3.0 v
14	19	0.72 ±0.1 vdc	---
-S	A6	0.04 ±0.1 vdc	---
-S	8	0.45 ±0.07 vdc	---
10	-S	0.06 ±0.1 vdc	---
19	-S	0.82 ±0.1 vdc	---
15	19	1.14 ±0.2 vdc	---
33	16	1.0 ±0.5 vdc	---
40	32	7.0 ±1.1 vdc	---
33	36	0.8 ±0.1 vdc	---
41	42	46.0 ±2.3 vpp	---
28	33	66.0 ±3.3 vpp	---
33	38	14.0 ±1.4 vdc	

NOTE

These measurements were made with a 115-volt, 60-cps, single-phase power input; the front-panel CURRENT controls fully clockwise (maximum); the front-panel VOLTAGE controls set for 120 vdc output; and the 48 -ohm load resistor across the output terminals (2.5amperes). Differential voltmeter HP 741A was used for all measurements.

Table 5-3. Bias and Reference Circuit Troubleshooting

Step	Meter Common	Meter Positive	Normal Indication	If Indication is not Normal, Check the Following Parts
1	33	40	33 ±1.7 vdc	CR31, C21
2	-S	33	6.2 ±0.3 vdc	CR6, CR14, VR4
3	27	33	34.1 ±1.7 vdc	CR30, C20
4	51	-S	19.5 ±1.0 vdc	Q10, Q11
5	51	24	10.3 ±0.6 vdc	CR27, VR3
6	51	22	9.7 ±0.5 vdc	R40, R43, Q6
7	51	21	9.7 ±0.5 vdc	R38, R42, Q5

Table 5-4. High Output Voltage Troubleshooting

Step	Meter Common	Meter Positive	Response	Probable Cause
1	Emitter of Q4	29	<0.5 vdc	a. Q4 shorted b. R16 shorted c. R15 shorted
2	14	17	>0.85 vdc	CR7 open
3	14	33	<2 vdc	a. Q1 open b. Q2 shorted c. CR1 shorted d. R2-R8 open

Table 5-5. Low Output Voltage Troubleshooting

Step	Meter Common	Meter Positive	Response	Probable Cause
1	Emitter of Q4	29	>5 vdc	a. Q4 open b. R16 open c. R15 open
2	14	17	<0.4 vdc	CR7 shorted
3	14	33	>6 vdc	a. Q1 shorted b. Q2 open c. R2-R8 shorted

Table 5-6. Common Troubles

Symptom	Checks and Probable Causes
Fuse blows when power supply is turned on.	Power supply has internal short. Disconnect Collector of Q7, turn-on power supply and check voltages (refer to table 5-2 or figure 4-2). If fuse blows with Q7 disconnected, check CR17, CR18, and T3.
Poor line regulation (constant voltage)	a. Check bias and reference circuit (para. 5-45). Refer to paragraph 5-69 for adjustment. b. Check line input to SCR regulator control circuit (T2, CR39 through CR43, R50, R51).
Poor load regulation (constant voltage)	a. Check bias and reference circuit (para. 5-45). b. Power supply going into current limit. Check constant current input circuit. c. Constant voltage loop oscillates. Check adjustment of R17 (para. 5-71).
Poor line and load regulation (constant current)	a. Check bias and reference circuit (para. 5-45). Refer to paragraph 5-69 for adjustment. b. Power supply going into voltage limit. Check constant voltage input circuit. c. Constant current loop oscillates. Check adjustment of R44 (para. 5-73).
High ripple	a. Check operating setup for ground loops. b. If output is floating (ungrounded) connect 1-μf capacitor between output and ground (unless particular application prohibits this). c. Check pi-section output filter C13, C17, and R29. d. Line imbalance. Check adjustment of R17 (para. 5-70).
Poor stability (constant voltage)	a. Check bias and reference circuit line regulation.(Refer to para. 5-69). b. Noisy programming resistors (R2-R8). c. CR1 or CR2 leaky. d. R1, R5, R40, or R41 noisy or drifting. e. Q1 or Q2 defective.
Poor stability (constant current)	a. Check bias and reference circuit line regulation. (Refer to para. 5-69). b. Noisy programming resistors (R9-R10). c. R20, R23, R38, or R39 noisy or drifting. d. Q8 defective.

Table 5-6. Common Troubles (cont.)

Symptom	Checks and Probable Causes
Oscillates (constant voltage)	Check R18, C1, C4, and adjustment of R17 (para. 5-71).
Oscillates (constant current)	Check C6, C24, R22, and adjustment or R20 (para. 5-66) and adjustment of R44 (para. 5-72).
Output voltage does not go to zero.	Check R6 and R47. (Refer to para. 5-63.)
Output current does not go to zero.	Check R20 and R46. (Refer to para. 5-67.)

Table 5-7. Checks and Adjustments after Replacement of Semiconductor Devices

Circuit Reference	Function	Check	Adjust
Q1, Q2	Constant voltage differential amplifier	Constant voltage line and load regulation; transient recovery time; zero voltage output	R6, R17
Q3	Turn-on circuit	Excessive transients at turn-on	-----
Q4	Gating Circuit	Constant voltage/constant current line and load regulation	-----
Q5	Constant voltage programming current regulator	Constant voltage programming coefficient	R38-R39
Q6	Constant Current programming current regulator	Constant current programming coefficient	R40-R41
Q7	SCR regulator control	Waveforms (shown in figure 4-2)	-----
Q8, Q9	Constant current differential amplifier	Constant current line and load regulation; zero current output	R20, R44
Q10	Bias and reference error detector/amplifier	Bias and reference circuit line regulation	R45
Q11	Bias and reference series regulator	Bias and reference circuit line regulation	R45
CR1, CR2, CR28	Constant voltage protection	Constant voltage load regulation	-----
CR6, CR9, CR10, CR11, CR12, CR14, CR27, CR46	Forward bias regulators	Voltage across each diode (0.6 to 0.85 vdc)	-----

Table 5-7. Checks and Adjustments after Replacement of Semiconductor Devices (cont.)

Circuit Reference	Function	Check	Adjust
CR17, CR18	SCR regulator	Constant voltage load regulation	-----
CR19, CR20 CR21, CR22	Bridge rectifier	Voltage across bridge at full output (120 vdc)	-----
CR23	Output Protection	Output voltage	-----
CR26	Constant current protection	Constant current line and load regulation	-----
CR30, CR31	Full-wave rectifier	Rectifier output (67 vdc)	-----
CR39, CR40 CR41, CR42 CR43	Bridge rectifier	Voltage across bridge (20-25 peak, full wave)	-----
CR5, CR7, CR8, CR44, CR45, CR47, CR48, CR49, CR50, CR51,	Diode switches	-----	-----
VR1	Constant voltage programming protection	Full output voltage and zero output voltage obtainable via VOLTAGE controls; voltage regulation at 120 vdc output	-----
VR3	Voltage reference	Bias and reference circuit line regulation	R45
VR4	Voltage reference	6.0 vdc line regulation	-----

Table 5-8. Adjustment and Calibration Summary

Adjustment or Calibration	Paragraph Reference	Control Device
Meter Zero	5-55	Meter Spring
Voltmeter Tracking	5-57	R25
Ammeter Tracking	5-59	R27
Constant Voltage Programming Current	5-61	R39
Zero Voltage Output	5-63	R6
Constant Current Programming Current	5-65	R41
Zero Current Output	5-67	R20
Bias and Reference Line Regulation	5-69	R45
Line Imbalance	5-71	R17
Constant Current Load Regulation	5-73	R44

SECTION VI
REPLACEABLE PARTS

6-1 INTRODUCTION

6-2 This section contains information for ordering replacement parts.

6-3 Table 6-4 lists parts in alpha-numerical order of the reference designators and provides the following information:

a. Reference Designators. For abbreviations, refer to Table 6-1.

b. Description. Refer to Table 6-2 for abbreviations.

c. Total Quantity (TQ) used in the instrument; given only first time the part number is listed.

d. Manufacturer's part number.

e. Manufacturer's code number. Refer to Table 6-3 for manufacturer's name and address.

f. ℗ Part Number.

g. Recommended spare parts quantity (RS) for complete maintenance of one instrument during one year of isolated service.

h. Parts not identified by a reference designator are listed at the end of Table 6-4 under Miscellaneous.

6-4 ORDERING INFORMATION

6-5 To order a replacement part, address order or inquiry to your local Hewlett-Packard sales office (see lists at rear of this manual for addresses).

6-6 Specify the following information for each part:

a. Model and complete serial number of instrument.

b. Hewlett-Packard part number.

c. Circuit reference designator.

d. Description.

6-7 To order a part not listed in Table 6-4, give a complete description of the part and include its function and location.

Table 6-1. Reference Designators

A = assembly	CR = diode
B = motor	DS = device, signaling (lamp)
C = capacitor	

Table 6-1. Reference Designators (Continued)

E = misc. electronic part	RT = thermistor
F = fuse	S = switch
J = jack	T = transformer
K = relay	V = vacuum tube, neon bulb, photocell, etc.
L = inductor	
M = meter	X = socket
P = plug	XF = fuseholder
Q = transistor	XDS = lampholder
R = resistor	Z = network

Table 6-2. Description Abbreviations

a	= amperes	obd	= order by description
c	= carbon	p	= peak
cer	= ceramic	pc	= printed circuit board
coef	= coefficient	pf	= picofarads = 10^{-12} farads
com	= common	pp	= peak-to-peak
comp	= composition	ppm	= parts per million
conn	= connection	pos	= position(s)
crt	= cathode-ray tube	poly	= polystyrene
dep	= deposited	pot	= potentiometer
elect	= electrolytic	prv	= peak reverse voltage
encap	= encapsulated	rect	= rectifier
f	= farads	rot	= rotary
fxd	= fixed	rms	= root-mean-square
GE	= germanium	s-b	= slow-blow
grd	= ground(ed)	sect	= section(s)
h	= henries	Si	= silicon
Hg	= mercury	sil	= silver
impg	= impregnated	sl	= slide
ins	= insulation(ed)	td	= time delay
K	= kilo = 1000	TiO_2	= titanium dioxide
lin	= linear taper	tog	= toggle
log	= logarithmic taper	tol	= tolerance
mA	= milli = 10^{-3}	trim	= trimmer
M	= megohms	twt	= traveling wave tube
ma	= milliamperes	var	= variable
μ	= micro = 10^{-6}	w/	= with
mfr	= manufacturer	W	= watts
mtg	= mounting	w/o	= without
my	= mylar	cmo	= cabinet mount only
NC	= normally closed		
Ne	= neon		
NO	= normally open		

Table 6-3. Code List of Manufacturers

CODE NO.	MANUFACTURER	ADDRESS
00629	EBY Sales Co.	New York, N.Y.
00656	Aerovox Corp.	New Bedford, Mass.
00853	Sangamo Electric Company, Ordill Division (Capacitors)	Marion, Ill.
01121	Allen Bradley Co.	Milwaukee, Wis.
01255	Litton Industries, Inc.	Beverly Hills, Calif.
01281	TRW Semiconductors, Inc.	Lawndale, Calif.
01295	Texas Instruments, Inc. Semiconductor-Components Division	Dallas, Texas
01686	RCL Electronics, Inc.	Manchester, N.H.
01930	Amerock Corp.	Rockford, Ill.
02114	Ferroxcube Corp. of America	Saugerties, N.Y.
02606	Fenwal Laboratories	Morton Grove, Ill.
02660	Amphenol-Borg Electronics Corp.	Broadview, Ill.
02735	Radio Corp. of America, Commercial Receiving Tube and Semiconductor Div.	Somerville, N.J.
03508	G.E. Semiconductor Products Dept.	Syracuse, N.Y.
03797	Eldema Corp.	Compton, Calif.
03877	Transitron Electronic Corp.	Wakefield, Mass.
03888	Pyrofilm Resistor Co.	Cedar Knolls, N.J.
04009	Arrow, Hart and Hegeman Electric Co.	Hartford, Conn.
04072	ADC Electronics, Inc.	Harbor City, Calif.
04213	Caddell-Burns Mfg. Co. Inc.	Mineola, N.Y.
04404	Dymec Division of Hewlett-Packard Co.	Palo Alto, Calif.
04713	Motorola, Inc., Semiconductor Products Division	Phoenix, Arizona
05277	Westinghouse Electric Corp. Semi-Conductor Dept.	Youngwood, Pa.
05347	Ultronix, Inc.	Grand Junction, Colo.
05820	Wakefield Engr. Inc.	Wakefield, Mass.
06004	The Bassick Co.	Bridgeport, Conn.
06486	IRC, Inc. Semiconductor Div.	Lynn, Mass.
06540	Amathom Electronic Hardware Co., Inc.	New Rochelle, N.Y.
06555	Beede Electrical Instrument Co., Inc.	Penacook, N.H.
06666	General Devices Co., Inc.	Indianapolis, Ind.
06751	Nuclear Corp. of America, Inc. U.S. Semcor Div.	Phoenix, Arizona
06812	Torrington Mfg. Co., West Div.	Van Nuys, Calif.
07137	Transistor Electronics Corp.	Minneapolis, Minn.
07138	Westinghouse Electric Corp. Electronic Tube Div.	Elmira, N.Y.
07263	Fairchild Semiconductor Div. of Fairchild Camera and Instrument Corp.	Mountain View, Calif.
07387	Birtcher Corp., The	Los Angeles, Calif.
07397	Sylvania Electric Products Inc. Mountain View Operations of Sylvania Electronic Systems	Mountain View, Calif.
07716	I. R. C. Inc.	Burlington, Iowa
07910	Continental Device Corp.	Hawthorne, Calif.
07933	Raytheon Mfg. Co., Semiconductor Div.	Mountain View, Calif.
08484	Breeze Corporations, Inc.	Union, N.J.
08530	Reliance Mica Corp.	Brooklyn, N.Y.
08717	Sloan Company	Sun Valley, Calif.
08730	Vemaline Products Co.	Franklin Lakes, N.J.
08863	Nylomatic Corp.	Morrisville, Pa.
09021	Airco Speer Electronic Components	Bradford, Pa.
09182	Hewlett-Packard Co., New Jersey Div.	Berkeley Heights, N.J.
09353	C & K Components	Newton, Mass.
09922	Burndy Corp.	Norwalk, Conn.
11236	CTS of Berne, Inc.	Berne, Ind.
11237	Chicago Telephone of California, Inc.	So. Pasadena, Calif.
11502	IRC Inc.	Boone, N.C.
11711	General Instrument Corp., Semiconductor Prod. Group, Rectifier Div.	Newark, N.J.
12136	Philadelphia Handle Co., Inc.	Camden, N.J.
12615	U.S. Terminals, Inc.	Cincinnati, Ohio
12617	Hamlin Inc.	Lake Mills, Wisconsin
12697	Clarostat Mfg. Co.	Dover, N.H.
14493	Hewlett-Packard Co., Loveland Division	Loveland, Colo.
14655	Cornell-Dubilier Elec. Corp.	Newark, N.J.
14936	General Instrument Corp., Semiconductor Prod. Group, Semiconductor Div.	Hicksville, N.Y.
15909	Daven Div. of Thos. Edison Industries, Mc Graw Edison Co.	Livingston, N.J.
16299	Corning Glass Works, Electronic Components Div.	Raleigh, N.C.
16758	Delco Radio Div. of General Motors Corp.	Kokomo, Ind.
17545	Atlantic Semiconductors, Inc.	Asbury Park, N.J.
17803	Fairchild	Mountainview, Calif.
19315	The Bendix Corp., Eclipse Pioneer Div.	Teterboro, N.J.
19701	Electra Mfg. Co.	Independence, Kan.

Table 6-3. Code List of Manufacturers (Continued)

CODE NO.	MANUFACTURER	ADDRESS
21520	Fansteel Metallurgical Corp.	No. Chicago, Ill.
22229	Union Carbide Corp., Linde Div., Kemet Dept.	Mountain View, Calif.
22767	ITT Semiconductors, A Division of International Telephone & Telegraph Corp.	Palo Alto, Calif.
24446	General Electric Co.	Schenectady, N.Y.
24455	General Electric Co., Lamp Division	Nela Park, Cleveland, Ohio
24655	General Radio Co.	West Concord, Mass.
26982	Dynacool Mfg. Co. Inc	Saugerties, N.Y.
27014	National Semiconductor Corp.	Santa Clara, Calif.
28480	Hewlett-Packard Co.	Palo Alto, Calif.
28520	Heyman Mfg. Co.	Kenilworth, N.J.
33173	G.E., Tube Dept.	Owensboro, Ky.
35434	Lectrohm, Inc.	Chicago, Ill.
37942	P.R. Mallory & Co., Inc.	Indianapolis, Ind.
42190	Muter Co.	Chicago, Ill.
43334	New Departure-Hyatt Bearings Div., General Motors Corp.	Sandusky, Ohio
44655	Ohmite Manufacturing Co.	Skokie, Ill.
46384	Penn Engr.	Doylestown, Pa.
47904	Polaroid Corp.	Cambridge, Mass.
49956	Raytheon Mfg. Co., Microwave and Power Tube Div.	Waltham, Mass.
55026	Simpson Electric Co.	Chicago, Ill.
56289	Sprague Electric Co.	North Adams, Mass.
58474	Superior Electric Co.	Bristol, Conn.
61637	Union Carbide Corp.	New York, N.Y.
63743	Ward-Leonard Electric Co.	Mt. Vernon, N.Y.
70563	Amperite Co., Inc.	Union City, N.J.
70901	Beemer Engrg. Co.	Fort Washington, Pa.
70903	Belden Mfg. Co.	Chicago, Ill.
71218	Bud Radio, Inc.	Willoughby, Ohio
71279	Cambridge Thermionic Corp.	Cambridge, Mass.
71400	Bussmann Mfg. Div. of Mc Graw-Edison Co.	St. Louis, Mo.
71450	CTS Corporation	Elkhart, Ind.
71468	I.T.T. Cannon Electric Inc.	Los Angeles, Calif.
71590	Centralab Div. of Globe Union, Inc.	Milwaukee, Wis.
71700	The Cornish Wire Co.	New York, N.Y.
71707	Coto-Coil	Providence, R.I.
71744	Chicago Miniature Lamp Works	Chicago, Ill.
71785	Cinch Mfg. Co.	Chicago, Ill.
71984	Dow Corning Corp.	Midland, Mich.
72136	Electro-Motive Mfg. Co. Inc., The	Willimantic, Conn.
72619	Dialight Corp.	Brooklyn, N.Y.

CODE NO.	MANUFACTURER	ADDRESS
72699	General Instrument Corp., Capacitor Div.	Newark, N.J.
72765	Drake Mfg. Co.	Chicago, Ill.
72962	Elastic Stop Nut Corp. of America	Union, N.J.
72982	Erie Technological Products, Inc.	Erie, Pa.
73138	Helipot Div. of Beckman Instruments, Inc.	Fullerton, Calif.
73168	Fenwal, Inc.	Ashland, Mass.
73293	Hughes Components Division of Hughes Aircraft Co.	Newport Beach, Calif.
73445	Amperex Electronic Co., Div. of North American Phillips Co., Inc.	Hicksville, N.Y.
73506	Bradley Semiconductor Corp.	New Haven, Conn.
73559	Carling Electric, Inc.	Hartford, Conn.
73734	Federal Screw Porducts, Inc.	Chicago, Ill.
73978	Hardwick Hindle Co., Memcor Components Div.	Huntington, Ind.
74193	Heinemann Electric Co.	Trenton, N.J.
74545	Harvey Hubbel, Inc.	Bridgeport, Conn.
74868	FXR Div. of Amphenol-Borg Electronics Corp.	Danbury, Conn.
74970	E.F. Johnson Co.	Waseca, Minn.
75042	International Resistance Co.	Philadelphia, Pa.
75183	Howard B. Jones Div., of Cinch Mfg. Corp. (Use 71785)	New York, N.Y.
75382	Kulka Electric Corp.	Mt. Vernon, N.Y.
75915	Littlefuse, Inc.	Des Plaines, Ill.
76381	Minnesota, Mining & Mfg. Co.	St. Paul, Minn.
76493	J.W. Miller Co.	Los Angeles, Calif.
76530	Cinch	City of Industry, Calif.
76854	Oak Manufacturing Co.	Crystal Lake, Ill.
77068	Bendix Corp., Bendix-Pacific Div.	No. Hollywood, Calif.
77147	Patton Mac Guyer Co.	Providence, R.I.
77221	Phaostron Instrument and Electronic Co.	South Pasadena, Calif.
77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.
77342	American Machine and Foundry, Potter and Brumfield Div.	Princeton, Ind.
77630	TRW Electronics, Components Div.	Camden, N.J.
77764	Resistance Products Co.	Harrisburg, Pa.
78189	Shakeproof Div. of Illinois Tool Works	Elgin, Ill.
78471	Everlock Chicago, Inc.	Chicago, Ill.
78488	Stackpole Carbon Co.	St. Marys, Pa.
78920	Stanwyck Winding Co., Inc.	Newburgh, N.Y.
79136	Tinnerman Products, Inc.	Cleveland, Ohio

Table 6-3. Code List of Manufacturers (Continued)

CODE NO.	MANUFACTURER	ADDRESS
78584	Stewart Stamping Corp.	Yonkers, N.Y.
79136	Waldes Kohinoor, Inc.	L.I.C., N.Y.
79307	Whitehead Metal Products Co., Inc.	New York, N.Y.
79727	Continental-Wirt Electronics Corp.	Philadelphia, Pa.
80031	Mepco Div. of Sessions Clock Co.	Morristown, N.J.
80294	Bourns, Inc.	Riverside, Calif.
81042	Howard Industries, Inc.	Racine, Wis.
81483	International Rectifier Corp.	El Segundo, Calif.
81751	Columbus Electronics Corp.	Yonkers, N.Y.
82099	Goodyear Sundries & Mechanical Co., Inc.	New York, N.Y.
82142	Airco Speer Electronic Components	Du Bois, Pa.
82219	Sylvania Electric Products, Inc., Electronic Tube Division	Emporium, Pa.
82389	Switchcraft, Inc.	Chicago, Ill.
82647	Metals and Controls, Inc., Spencer Products	Attleboro, Mass.
82866	Research Products Corp.	Madison, Wis.
82877	Rotron Mfg. Co., Inc.	Woodstock, N.Y.
82893	Vector Electronic Co.	Glendale, Calif.
83058	Carr Fastener Co.	Cambridge, Mass.
83186	Victory Engineering Corp.	Springfield, N.J.
83298	Bendix Corp., Red Bank Div.	Eatontown, N.J.
83330	Herman H. Smith, Inc.	Brooklyn, N.Y.
83385	Central Screw Co.	Chicago, Ill.
83501	Gavitt Wire and Cable Co., Div. of Amerace Corp.	Brookfield, Mass.
83508	Grant Pulley and Hardware Co.	West Nyack, N.Y.
83594	Burroughs Corp., Electronic Components Div.	Plainfield, N.J.
83835	U.S. Radium Corp.	Morristown, N.J.
83877	Yardeny Laboratories, Inc.	New York, N.Y.
84171	Arco Electronics, Inc.	Great Neck, N.Y.
84411	TRW Capacitor Div.	Ogallala, Neb.
86684	Radio Corp. of America, Electronic Components & Devices Div.	Harrison, N.J.
86838	Rummel Fibre Co.	Newark, N.J.
87034	Marco Industries Co.	Anaheim, Calif.
87216	Philco Corp. (Lansdale Div.)	Lansdale, Pa.
87585	Stockwell Rubber Co., Inc.	Philadelphia, Pa.
87929	B. M. Tower Co., Inc.	Bridgeport, Conn.
88140	Cutler-Hammer, Inc.	Lincoln, Ill.
89473	General Electric Distributing Corp.	Schenectady, N.Y.
91345	Miller Dial and Nameplate Co.	El Monte, Calif.
91637	Dale Electronics, Inc.	Columbus, Neb.
91662	Elco Corp.	Willow Grove, Pa.
91929	Honeywell, Inc., Micro Switch Div.	Freeport, Ill.
93332	Sylvania Electric Prod., Inc., Semiconductor Prod. Div.	Woburn, Mass.
93410	Stevens Mfg. Co., Inc.	Mansfield, Ohio
94144	Raytheon Co., Components Div., Industrial Components Operation	Quincy, Mass.
94154	Tung-Sol Electric, Inc.	Newark, N.J.
94222	South Chester Corp.	Chester, Pa.
94310	Tru-Ohm Products, Memcor Components Div.	Huntington, Ind.
95263	Leecraft Mfg. Co., Inc.	Long Island City, N.Y.
95354	Methode Mfg. Co.	Chicago, Ill.
95712	Bendix Corp, Microwave Div.	Franklin, Ind.
96791	Amphenol Controls Div. of Amphenol-Borg Electronics Corp.	Janesville, Wis.
97464	Industrial Retaining Ring Co.	Irvington, N.J.
98291	Sealectro Corp.	Mamaroneck, N.Y.
98978	International Electronic Research Corp.	Burbank, Calif.
99934	Renbrandt, Inc.	Boston, Mass.

THE FOLLOWING H-P VENDORS HAVE NO NUMBERS ASSIGNED IN THE LATEST SUPPLEMENT TO THE FEDERAL SUPPLY CODE FOR MANUFACTURERS HANDBOOK.

0000	Cooltron	Oakland, Calif.
00000	Plastic Ware Co.	Brooklyn, N.Y.

MANUAL CHANGES

Model 6443B DC Power Supply
Manual Serial Number Prefix 6G

Make all corrections in the manual according to errata below, then check the following table for your power supply serial number and enter any listed change(s) in the manual.

SERIAL		MAKE CHANGES
Prefix	Number	
ALL	-	Errata
6G	0381 - 0730	1
6G	0731 - 0820	1, 2
0C	0821 - 0905	1, 2, 3
0H	0906 - up	1, 2, 3, 4

ERRATA:

Throughout the manual change model from "6443A" to "6443B".

In Table 1-1 and in the applicable portions of the specification checks in Section V, make the following changes:

TEMP. COEFFICIENT: Change constant voltage temperature coefficient to 0.03% plus 20mV.

OUTPUT STABILITY: Change constant voltage output stability to 0.10% plus 60mV.

TRANSIENT RECOVERY: Change to "less than 200 milliseconds is required for output voltage recovery to within 600 millivolts ---".

Add to Paragraph 1-12 and 3-11 "The (+), (-), and GND jacks on the front panel can be used for loads of less than 3 amperes and for applications not requiring remote programming, remote sensing, auto-parallel, auto-series, and auto-tracking."

Change Paragraph 1-14 to read: "Hewlett-Packard power supplies are identified by a three-part serial number tag. The first part is the model number, the second part is the manufacturing number/letter code, and the third part is the serial number. This manual applies to all Model 6443B power supplies with the same serial number prefix as that given on the title page. Change sheets may be included in the manual to reflect on the latest engineering changes."

In Figure 3-2 through 3-11, change the (-) and (+) terminals (adjacent to the -S and +S terminals) to A8 and A9, respectively.

In Table 1-1 (Specifications), note that the maximum ac line protection capacity required for SCR firing current surges is 10 amperes.

In the Replaceable Parts Table, change transistor Q10 to 2N2907A, Sprague, 56289, ℎ Part No. 1853-0099.

On Page 3-8, in Figure 3-3, disconnect the lead going to (+) on the right hand terminal strip and connect it instead to (+S) on the same terminal strip.

Observe the following precaution when repairing the unit.

CAUTION

When replacing the SCR's, install with a torque of between 15 and 25 inch pounds. A torque below 15 inch pounds will result in a poor connection between the SCR and heat sink and the SCR will run too hot. If more than 25 inch pounds is used, the SCR could be broken.

In the replaceable parts list, change diodes CR30 and CR31 to .75A, 200prv, GE 1N5059, HP Part No. 1901-0327.

CHANGE 1:

In the Replaceable Parts Table, add R14 (selected) $\frac{1}{2}$W, ±5%, AB. (Connect R14 across voltmeter terminals on schematic.) Also, change R25 to 5KΩ potentiometer, ℎ Part No. 2100-1824.

CHANGE 2:

In the Replaceable Parts Table, change capacitor C1 to ℎ Part No. 0160-0493.

CHANGE 3:

On the Title Page, change the serial number prefix code from 6G to 0C.

In the Replaceable Parts Table, make the following changes:

CR17,18: Change to HP Part No. 1884-0058.
R32: 12KΩ ±5% $\frac{1}{2}$W, HP Part No. 0686-1235.
R21: 100Ω ±5% 2W, HP Part No. 0698-3620.
R17: 3.9KΩ ±5% $\frac{1}{2}$W, HP Part No. 0686-3925.

CHANGE 4:

On the Title Page, change the serial number prefix code from "0C" to "0H."

On the schematic diagram and in the replaceable parts list, add diodes CR24 and CR25, 200prv, 250mW, HP Part No. 1901-0033. The diodes are connected in parallel opposition (anode to cathode) from the base of Q8 to the cathode of CR26.

5-25-70

Reference Designator	Description	Quantity	Mfr. Part # or Type	Mfr.	Mfr. Code	℗ Stock No.	A
C1	fxd, paper .47μf 200vdc	1	155P47492	Sprague	56289	0160-2463	1
C2	fxd, elect 100μf 6vdc	1	30D107G006DB4	Sprague	56289	0180-1734	1
C3	fxd, film .0022μf 200vdc	1	192P22292	Sprague	56289	0160-0154	1
C4,5	fxd, elect 5μf 65vdc	2	D33689	Sprague	56289	0180-1836	1
C6,22,25	fxd, elect 1μf 35vdc	3	150D105X9036A2	Sprague	56289	0180-0291	1
C7-9,14-16, 18,19,23	Not Assigned	-	-	-	-	-	-
C10,12	fxd, paper 0.1μf 400vdc	2	160P10494	Sprague	56289	0160-0013	1
C11	fxd, paper 1μf 200vdc	1	161P10502	Sprague	56289	0160-2466	1
C13,17	fxd, elect 4500μf 150vdc	2	32D452F150DF6B	Sprague	56289	0180-1839	1
C20,21	fxd, elect 300μf 40vdc	2	34D307G040GJ4	Sprague	56289	0180-1805	1
C24	fxd, elect 68μf 15vdc	1	150D686X0015R2	Sprague	56289	0180-1835	1
C26,27	fxd, film .082μf 200vdc	2	192P82392	Sprague	56289	0160-0167	1
C28	fxd, film .22μf 80vdc	1	192P2249R8	Sprague	56289	0160-2453	1
CR1,5,7,8,11, 26,28,39-45, 48,	Diode, sil.	15	1N485B	Sylv.	93332	1901-0033	7
CR2,3,6,9,10, 12,14,27,46, 47,49-51	Rect. sil. 200ma 10prv	13		Sylv.	93332	1901-0461	7
CR4,13,15,16, 24,25,29, 32-38	Not Assigned	-	-	-	-	-	-
CR17,18	SCR, 7A 200prv	2	C20B	G.E.	03508	1884-0032	2
CR19-23	Rect. sil. 3A 200prv	5	MR1032B	Motorola	04713	1901-0416	5
CR30,31	Rect. sil. 500ma 200prv	2	1N3253	R.C.A.	02735	1901-0389	2
DS1	Indicator Light, neon	1	858-R	Sloan	08717	1450-0048	1
F1	Fuse, 10A @ 250v 3AB	1	314010	Littlefuse	75915	2100-0051	5
Q1-4,6,8,9	SS NPN sil.	7	2N3391	G.E.	03508	1854-0071	6
Q5	SS NPN sil.	1	SM8747	T.I.	01295		1
Q7,11	SS NPN sil.	2	2N3417	G.E.	03508	1854-0087	2
Q10	SS PNP sil.	1	2N2907A	Sprague	56289	1853-0099	1
R1	fxd, film 33KΩ ±1% 1/8w	1		I.R.C.	07716	0698-5089	1
R2	var. ww 40K ±5% 2w (10 turn) @ 25°C	1	100224-3	HLAB	09182		1
R3,13	fxd, film 43KΩ ±1% 1/8w	2		I.R.C.	07716	0698-5090	1
R4,19	fxd, film 100KΩ ±1% 1/8w	2		I.R.C.	07716	0757-0465	1
R5	fxd, film 43KΩ ±1% 1/8w	1		I.R.C.	07716	0698-5090	1
R6,32,35,36	fxd, film 3KΩ ±1% 1/8w	4		I.R.C.	07716	0757-1093	1
R7	met. film 4.75KΩ ±1% 1/8w	1	MF5C T-O	Electra	19709	0757-0437	1
R8,10	var. ww 300Ω 5%	2	100213-2	HLAB	09182	2100-1848	1
R9	var. ww 10Ω ±5%	1	100213-11	HLAB	09182		1
R11	fxd, comp 3KΩ ±5% 1w	1		A.B.	01121	0689-3025	1
R12,15	fxd, comp 680KΩ ±5% ½w	2		A.B.	01121	0686-6845	1
R14	Not Assigned	-	-	-	-	-	-
R16,33	fxd, comp 1KΩ ±5% ½w	2		A.B.	01121	0686-1025	1
R17,39,41, 44	fxd, comp SELECTED ±5% ½w	4		A.B.	01121		-
R18,34,53	fxd, comp 10KΩ ±5% ½w	3		A.B.	01121	0686-1035	1
R20	fxd, film 12KΩ ±1% 1/8w	1		I.R.C.	07716	0698-5088	1

Reference Designator	Description	Quantity	Mfr. Part # or Type	Mfr.	Mfr. Code	Stock No.	A
R21	fxd, film 43Ω ±5% 2w	1	Type C42S	Corning	16299	0698-3614	1
R22, 30, 50	fxd, comp 3KΩ ±5% ½w	3		A. B.	01121	0686-3025	1
R23	fxd, ww 0.4Ω ±5% 40w 20ppm	1	2BR-37	H. H.	73978		1
R24	fxd, film 147KΩ ±1% ½w	1		I. R. C.	07716	0698-3175	1
R25	var. ww 10KΩ (Modify)	1	Type 110-F4	C. T. S.	11236		1
R26, 37, 43	fxd, film 1KΩ ±1% ¼w	3		I. R. C.	07716	0757-0338	1
R27	var. ww 250Ω (Modify)	1	Type 110-F4	C. T. S.	11236		1
R28	fxd, ww 5KΩ ±5% 10w	1	Type 10XM	W. L.	63743	0811-1914	1
R29	OMIT	-	-	-	-	-	-
R31, 58	fxd, comp 33KΩ ±5% ½w	2		A. B.	01121	0686-3335	1
R38	fxd, film 3.01KΩ ±1% ¼w	1		I. R. C.	07716	0757-0339	1
R40	fxd, film 2.74KΩ ±1% ¼w	1		I. R. C.	07716	0757-0742	1
R42	fxd, film 2KΩ ±5% 2w	1	Type C42S	Corning	16299		1
R45	fxd, comp 51KΩ ±5% ½w	1		A. B.	01121	0686-5135	1
R46	fxd, comp 10 MegΩ ±5% ½w	1		A. B.	01121	0686-1065	1
R47	fxd, comp 560KΩ ±5% ½w	1		A. B.	01121	0686-5635	1
R48	fxd, comp 43KΩ ±5% ½w	1		A. B.	01121	0686-4335	1
R49	STRAP	-	-	-	-	-	-
R51	fxd, comp 180Ω ±5% ½w	1		A. B.	01121	0686-1815	1
R52	fxd, film 3KΩ ±5% 2w	1	Type C42S	Corning	16299		1
R54, 55	fxd, comp 47Ω ±5% ½w	2		A. B.	01121	0686-4705	1
R56	fxd, comp 39Ω ±5% ½w	1		A. B.	01121	0686-3905	1
R57	fxd, ww 1.3Ω ±5% 40w	1	2BR-37	H. H.	73978		1
S1	Switch DPST	1	2GK50-62	Carling	73559		1
T1	Power Transformer	1		HLAB	09182	9100-1868	1
T2	Bias Transformer	1	643392	HLAB	09182		1
T3	Pulse Transformer	1		HLAB	09182	9100-1875	1
VR1, 2	Diode, zener 75.0v ±5%	2		Cont. Dev.	07910	1902-3393	2
VR3	Diode, zener 9.4v ±5%	1	1N2163	Semcor	06751	1902-0762	1
VR4	Diode, zener 4.22v ±5%	1		Cont. Dev.	07910	1902-3070	1
	Barrier Strip	1	602-Y-3	Kulka	75382	0360-1214	1
	Barrier Strip	1	10100-11	HLAB	09182		1
	Jumper	5	422-13-11-013	Cinch	71785	0360-1143	1
	Meter, 2¼" size, 0-150 volt	1		HLAB	09182	1120-1164	1
	Meter, 2¼" size, 0-3 amp	1		HLAB	09182	1120-1165	1
	Meter, bezel 1/6 mod.	2		HLAB	09182	5040-0651	1
	Meter Spring	8		HLAB	09182	1460-0256	2
	5 Way binding post (red)	1	DF21RC	Superior	58474		1
	5 Way binding post (black)	2	DF21BC	Superior	58474	1510-0039	1
	Fuse Holder	1	342014	Littlefuse	75915	1400-0048	1
	Knob, ¼ insert pointer 5/8 dia	3		HLAB	09182	0370-0084	1
	Knob, 5/8 dia.	1		HLAB	09182	0370-0137	1
	Line cord 6' 18-3(16-30) slate gray, stranded plug PH151	1	KH-4629	Beldon	70903	8120-0852	1
	Strain Relief	1	SP-6P3-4	Heyman	28520	0400-0098	1
	Nut, captive	12	C8091-632-4	Tinnerman	89032		3
	Fastener	1	C684-1024-4	Tinnerman	89032		1
	Rubber bumper, black, 55/60, Durmo hard	4	3066	Stockwell	87575	0403-0085	1

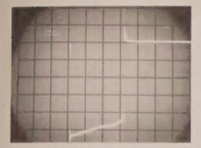

A. Test Points 31-33, 5usec/cm, 5V/cm

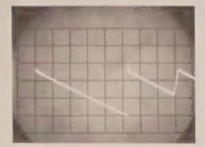

B. Test Points 29-33, 1ms/cm, 1V/cm

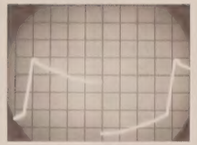

C. Test Points 37-33, 1ms/cm, 1V/cm

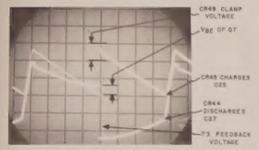

D. Waveforms B and C Superimposed

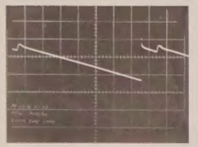

E. Same as B, Except Smaller Load Used (2V, 3A)

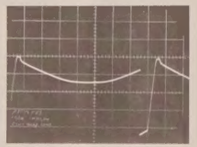

F. Same as C, Except Q7 Fires Later Due to Smaller Load (2V, 3A)

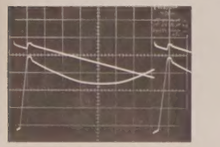

G. Waveforms E and F Superimposed

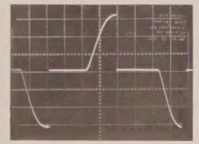

H. Test Points 45-ACC 2ms/cm, 50V/cm

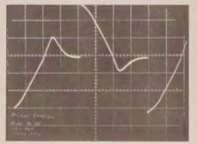

I. Test Points 45-AC 2ms/cm, 50V/cm

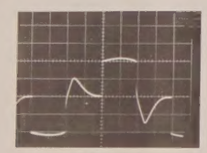

J. Test Points 47-48 2ms/cm, 10V/cm

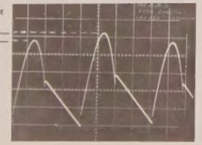

K. Test Points 46-18 2ms/cm, 0.5V/cm

All waveforms were taken with 115 Volt, 60Hz, single-phase input and 40Vdc, 25 Ampere load (except E and F as indicated). Waveforms H and I require the oscilloscope to be ungrounded. If it is not desirable to unground the oscilloscope, use a 1-kva isolation transformer between the input power source and the power supply power input.

WARNING

If the oscilloscope is ungrounded, injury can occur if personnel touch the oscilloscope case and other equipment simultaneously.

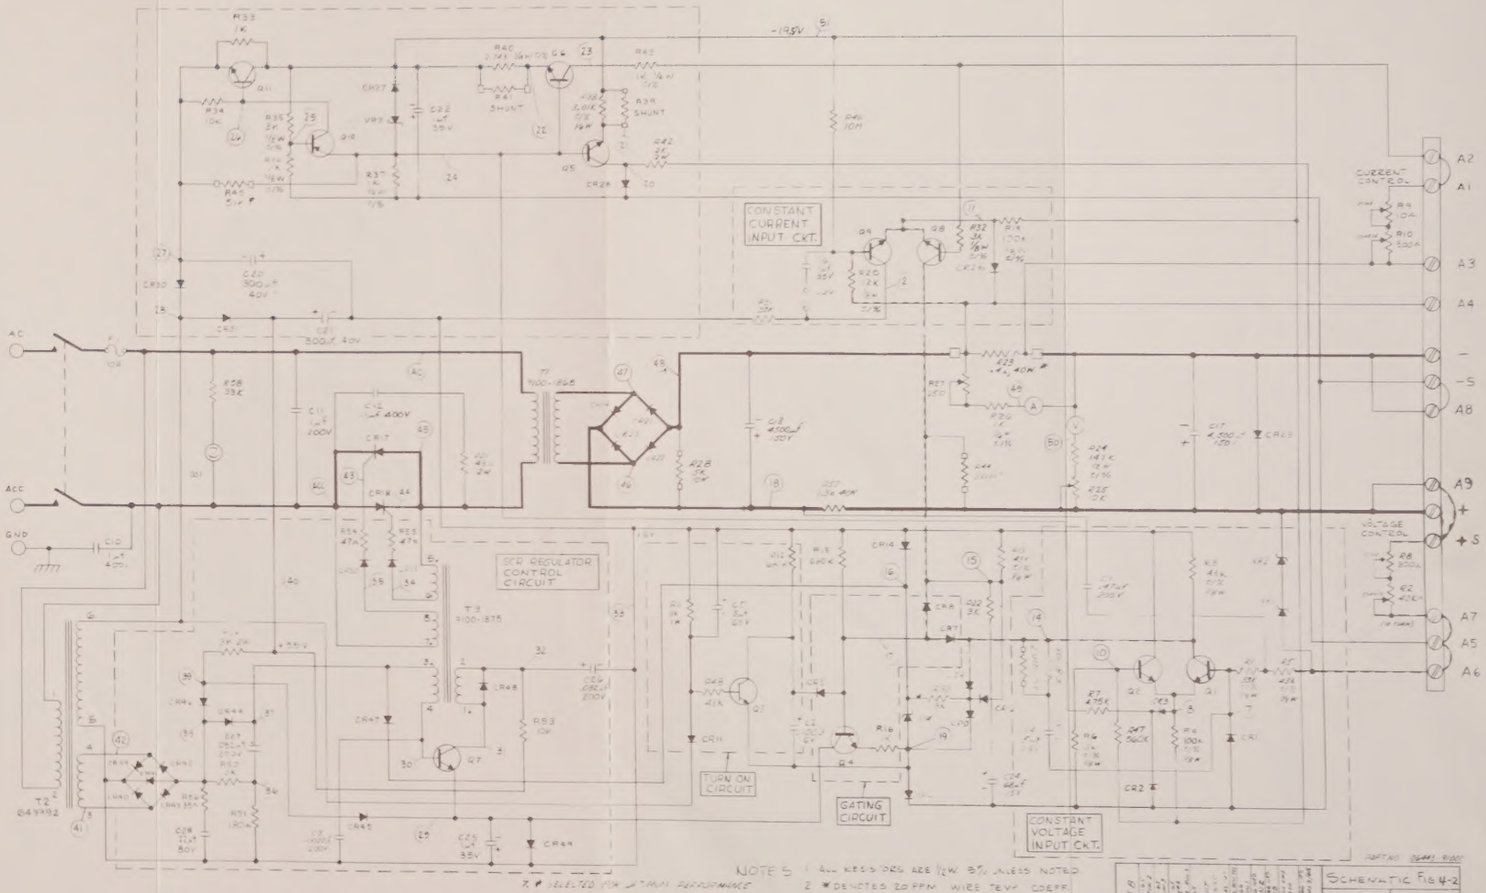

PATENT APPLIED FOR ON THIS CIRCUIT. LICENSE TO USE MUST BE OBTAINED IN WRITING FROM HARRISON LABORATORIES DIV. OF HEWLETT PACKARD

NOTES
1. ALL RESISTORS ARE ½W 5% UNLESS NOTED
2. * DENOTES 20 PPM WIRE TEMP. COEFF.
3. EBAE TERMINALS SHOWN IN NORMAL STEADY STATE
4. INPUT VOLTAGES MEASURED AT 115V NO LOAD.
5. ——— DENOTES VOLTAGE SIGNAL
6. - - - - DENOTES CURRENT SIGNAL

SCHEMATIC FIG 4-2

HARRISON LAB. BERKELEY HEIGHTS, N.J. Div. of HEWLETT PACKARD

HEWLETT · PACKARD SALES AND SERVICE

EUROPE

AUSTRIA
Unilaber GmbH
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33
Vienna A-1095
Tel: 42 61 81
Cable: LABORINSTRUMENT Vienna
Telex: 75 762

BELGIUM
Hewlett-Packard Benelux S.A.
348 Boulevard du Souverain
Brussels 16
Tel: 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494

DENMARK
Hewlett-Packard A/S
Langebjerg 6
2850 **Naerum**
Tel: (01) 80 40 40
Cable: HEWPACK AS
Telex: 66 40

FINLAND
Hewlett-Packard Oy
Gyldenintie 3
Helsinki 20
Tel: 67 35 38
Cable: HEWPACKOY-Helsinki
Telex: 12-1563

FRANCE
Hewlett-Packard France
Quartier de Courtaboeuf
Boite Postale No. 6
91 Orsay
Tel: 920 88 01
Cable: HEWPACK Orsay
Telex: 60048

Hewlett-Packard France
4 Quai des Etroits
69 **Lyon** 5ème
Tel: 42 63 45
Cable: HEWPACK Lyon
Telex: 31617

GERMANY
Hewlett-Packard Vertriebs-GmbH
Lietzenburgerstraße 30
1 **Berlin W** 30
Tel: 24 60 65/66
Telex: 18 34 05

Hewlett-Packard Vertriebs-GmbH
Herrenbergerstrasse 110
703 **Böblingen**, Württemberg
Tel: 07031-6671
Cable: HEPAG Böblingen
Telex: 72 65 739

Hewlett-Packard Vertriebs-GmbH
Achenbachstrasse 15
4 **Düsseldorf** 1
Tel: 68 57 58/59
Telex: 85 86 533

Hewlett-Packard Vertriebs-GmbH
Berliner Strasse 117
6 **Nieder-Eschbach/Frankfurt** 56
Tel: (0611) 50 10 64
Cable: HEWPACKSA Frankfurt
Telex: 41 32 49

Hewlett-Packard Vertriebs-GmbH
Beim Strohhause 26
2 **Hamburg** 1
Tel: 24 05 51/52
Cable: HEWPACKSA Hamburg
Telex: 21 53 32

Hewlett-Packard Vertriebs-GmbH
Reginfriedstrasse 13
8 **München** 9
Tel: 0811 69 59 71/75
Cable: HEWPACKSA München
Telex: 52 49 85

GREECE
Kostas Karayannis
18, Ermou Street
Athens 126
Tel: 230303 232947
Cable: RAKAR Athens
Telex: 21 59 62 RKAR GR

IRELAND
Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks, England
Tel: Slough 753-33341
Cable: HEWPIE Slough
Telex: 84413

ITALY
Hewlett-Packard Italiana S.p.A.
Via Amerigo Vespucci 2
20124 **Milano**
Tel: 6251 (10 lines)
Cable: HEWPACKIT Milan
Telex: 32046

Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi 25
00144 **Roma** - Eur
Tel: 591 2544
Cable: HEWPACKIT Roma
Telex: 61514

NETHERLANDS
Hewlett-Packard Benelux, N.V.
Weerdestein 117
Amsterdam-Z 1
Tel: 42 77 77
Cable: PALOBEN Amsterdam
Telex: 13 216

NORWAY
Hewlett-Packard Norge A/S
Box 149
Nesveien 13
Haslum
Tel: (02) 83 60
Cable: HEWPACK Oslo
Telex: 6621

PORTUGAL
Telectra
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72
Cable: TELECTRA Lisbon
Telex: 1598

SPAIN
Ataio Ingenieros
Gandoger 76
Barcelona 6
Tel: 211-44-66

Ataio Ingenieros
Enrique Larreta 12
Madrid, 16
Tel: 235 43 44
Cable: TELEATAIO Madrid
Telex: 2 72 49

SWEDEN
Hewlett-Packard (Sverige) AB
Hagakersgatan 9C
S 431 04 **Mölndal** 4
Tel: 031 - 27 68 00

Hewlett-Packard (Sverige) AB
Svetsarvägen 7
S171 20 **Solna** 1
Tel: (08) 98 12 50
Cable: MEASUREMENTS Stockholm
Telex: 10721

SWITZERLAND
Hewlett Packard (Schweiz) AG
Zurcherstrasse 20
8952 Schlieren
Zurich
Tel: (051) 98 18 21/24
Cable: HEWPACKAG Zurich
Telex: 53933

Hewlett Packard (Schweiz) A.G.
Rue du Bois-du-Lan 7
1217 Meyrin-**Geneva**
Tel: (022) 41 54 00
Cable: HEWPACKSA Geneva
Telex: 2 24 86

TURKEY
Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel: 49 40 40
Cable: TELEMATION Istanbul

UNITED KINGDOM
Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: Slough 33341
Cable: HEWPIE Slough
Telex: 84413

YUGOSLAVIA
Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 34 33 32, 34 26 19
Cable: BELRAMEL Brussels
Telex: 23790

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard S.A.
Rue du Bois-du-Lan 7
1217 Meyrin-**Geneva**
Tel: (022) 41 54 00
Cable: HEWPACKSA Geneva
Telex: 2.24.86

AFRICA, ASIA, AUSTRALIA

ANGOLA
Telectra Empresa Técnica de Equipamentos Eléctricos SAR
Rua de Barbosa Rodrigues 42-1°
Box 6487
Luanda
Cable: TELECTRA Luanda

AUSTRALIA
Hewlett-Packard Australia Pty. Ltd.
22-26 Weir Street
Glen Iris, 3146
Victoria
Tel: 20.1371 (4 lines)
Cable: HEWPARD Melbourne
Telex: 31024

Hewlett-Packard Australia Pty. Ltd.
61 Alexander Street
Crows Nest 2065
New South Wales
Tel: 43 7866
Cable: HEWPARD Sydney
Telex: 21561

Hewlett-Packard Australia Pty. Ltd.
97 Churchill Road
Prospect 5082
South Australia
Tel: 65 2366
Cable: HEWPARD Adelaide

Hewlett Packard Australia Pty. Ltd.
2nd Floor, Suite 13
Casablanca Buildings
196 Adelaide Terrace
Perth, W.A. 6000
Tel: 21 3330

CEYLON
United Electricals Ltd.
P.O. Box 681
Tahalia Building
Staples Street
Colombo 2
Tel: 5496
Cable: HOTPOINT Colombo

CYPRUS
Kypronics
19-19D Hummer Avenue
P.O. Box 752
Nicosia
Tel: 62821-75628
Cable: ME-I-NAMI

ETHIOPIA
African Salespower & Agency Private Ltd., Co.
P. O. Box 718
58/59 Cunningham St.
Addis Ababa
Tel: 12285
Cable: ASACO Addisaboba

HONG KONG
Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building
10, Chater Road
Hong Kong
Tel: 240168, 232735
Cable: SCHMIDTCO Hong Kong

INDIA
The Scientific Instrument Co., Ltd.
6, Tej Bahadur Sapru Road
Allahabad 1
Tel: 2451
Cable: SICO Allahbad

The Scientific Instrument Co., Ltd.
12/5 Dickanson Road
Bangalore 1
Cable: SICO Bangalore

The Scientific Instrument Co., Ltd
240, Dr. Dadabhai Naoroji Road
Bombay 1
Tel: 26-2642
Cable: SICO Bombay

The Scientific Instrument Co., Ltd.
31, Esplanade East
Calcutta 1
Tel: 23-4129
Cable: SICO Calcutta

The Scientific Instrument Co., Ltd.
30, Mount Road
Madras 2
Tel: 86329
Cable: SICO Madras

The Scientific Instrument Co., Ltd.
17, Kamalnayan Society
P.O. Navajivan
Ahmedabad 14
Cable: SICO, Ahmedabad

The Scientific Instrument Co Ltd.
5-8-525 Mahatma Gandhi Road
Hyderabad-1 (A-P) India
Cable: SICO Hyderabad

The Scientific Instrument Co., Ltd.
B-7, Ajmeri Gate Extn.
New Delhi 1
Tel: 37-1053
Cable: SICO New Delhi

INDONESIA
Bah Bolon Trading Coy. N.V.
Djalan Merdeka 29
Bandung
Tel: 4915 51560
Cable: ILMU
Telex: 809

IRAN
Telecom, Ltd.
P. O. Box 1812
240 Kh. Saba Shomali
Tehran
Tel: 43850, 48111
Cable: BASCOM Teheran

ISRAEL
Electronics & Engineering Div. of Motorola Israel Ltd.
17 Aminadav Street
Tel-Aviv
Tel: 36941 (3 lines)
Cable: BASTEL Tel-Aviv
Telex: Bastel Tv 033-569

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Nissei Ibaragi Bldg.
2-2-8 Kasuga
Ibaragi-Shi
Osaka
Tel: 71-1561

Yokogawa-Hewlett-Packard Ltd.
Ito Building
No. 59, Kotori-cho
Nakamura-ku, **Nagoya** City
Tel: 551-0215

Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
59 Yoyogi 1-chrome
Shibuya-ku, **Tokyo**
Tel: 370-2281/7
Cable: 232-2024YHP
Cable: YHPMARKET TOK 23-724

KENYA
R. J. Tilbury Ltd.
P. O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 68206, 58196
Cable: ARJAYTEE Nairobi

KOREA
American Trading Co., Korea, Ltd.
P.O. Box 1103
Dae Kyung Bldg.
107 Sejong Ro
Chongro-Ku
Seoul
Tel: 75-5841 (4 lines)
Cable: AMTRACO Seoul

LEBANON
Constantin E. Macridis
Clemenceau Street
P.O. Box 7213
Beirut
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA
MECOMB Malaysia Ltd.
2 Lorong 13/8A
Section 13
Petaling Jaya, **Selangor**
Cable: MECOMB Kuala Lumpur

MOZAMBIQUE
A. N. Goncalves, LDA.
4.3 Apt. 14 Av. D. Luis
P.O. Box 107
Laurence Marques
Cable: NEGON

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, S.E. 1
Tel: 59-559
Cable: HEWPACK Wellington

PAKISTAN (EAST)
Mushko & Company, Ltd.
Zivat Chambers
31, Jinnah Avenue
Dacca
Tel: 280058
Cable: NEWDEAL Dacca

PAKISTAN (WEST)
Mushko & Company, Ltd.
Oosman Chambers
Victoria Road
Karachi 3
Tel: 511027, 512927
Cable: COOPERATOR Karachi

PHILIPPINES
Electromex Inc.
2179 Pasong Tamo
Makati, Rizal
P.O. Box 4326
Manila
Tel: 88-91-71 or 88-83-76
Cable: ELEMEX Manila

SINGAPORE
Mechanical and Combustion Engineering Company Ltd.
9, Jalan Kilang
Singapore, 3
Tel: 642361-3
Cable: MECOMB Singapore

SOUTH AFRICA
Hewlett Packard South Africa (Pty.), Ltd.
Hill House
43 Somerset Rd.
Cape Town
Tel: 3-6019
Cable: HEWPACK Cape Town
Telex: 7038CT

Hewlett Packard South Africa (Pty.), Ltd.
P.O. Box 31716
30 De Beer Street
Braamfontein, **Johannesburg**
Tel: 724-4172 724-4195
Telex: 0228 IH
Cable: HEWPACK Johannesburg

TAIWAN REP. OF CHINA
Hwa Shong Electronic Co., Ltd.
P. O. Box 1558
Room 404
Chia Hsin Building
No. 96 Chung Shan
North Road, Sec. 2
Taipei
Tel: 555211 Ext. 532-539
545936; 546076, 548661
Cable: VICTRONIX Taipei

TANZANIA
R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 25803, 68206, 58196
Cable: ARJAYTEE Nairobi

THAILAND
The International Engineering Co., Ltd.
P. O. Box 39
614 Sukhumvit Road
Bangkok
Tel: 59722 (7 lines)
Telex: INTERCO BK 226
Cable: GYSOM BANGKOK

UGANDA
R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 25803, 68206, 58196
Cable: ARJAYTEE Nairobi

VIETNAM
Peninsular Trading Inc.
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20.805
Cable: PENINSULA Saigon

ZAMBIA
R. J. Tilbury (Zambia) Ltd.
P.O. Box 2792
Lusaka
Zambia, Central Africa

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard INTERCONTINENTAL
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8461

HEWLETT · PACKARD SALES AND SERVICE

UNITED STATES

ALABAMA
P.O. Box 4207
2900 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA
3009 North Scottsdale Road
Scottsdale 85251
Tel: (602) 945-7601
TWX: 910-950-1282

5737 East Broadway
Tucson 85716
Tel: (602) 298-2313
TWX: 910-952-1162

CALIFORNIA
1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2591 Carlsbad Avenue
Sacramento 95821
Tel: (916) 482-1463
TWX: 910-367-2092

1055 Shaffer Street
San Diego 92106
Tel: (714) 223-8103
TWX: 910-335-2000

COLORADO
7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT
508 Tolland Street
East Hartford 06108
Tel: (203) 289-9394
TWX: 710-425-3416

111 East Avenue
Norwalk 06851
Tel: (203) 853-1251
TWX: 710-468-3750

DELAWARE
3941 Kennett Pike
Wilmington 19807
Tel: (302) 655-6161
TWX: 510-666-2214

FLORIDA
P.O. Box 545
Suite 106
1999 N.E. 2nd Avenue
Miami Shores 33153
Tel: (305) 754-4565
TWX: 810-848-7262

P.O. Box 20007
Herndon Station 32814
621 Commonwealth Avenue
Orlando
Tel: (305) 841-3970
TWX: 810-850-0113

P.O. Box 4228
Madeira Beach 33708
435 150th Avenue
St. Petersburg
Tel: (813) 391-0211
TWX: 810-863-0366

GEORGIA
P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

ILLINOIS
5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA
3839 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA
P.O. Box 856
1942 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND
6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-0850

P.O. Box 1648
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS
32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-8960
TWX: 710-326-6904

MICHIGAN
24315 Northwestern Highway
Southfield 48075
Tel: (313) 353-9100
TWX: 810-232-1532

MINNESOTA
7625 University Avenue
St. Paul 55114
Tel: (612) 645-9461
TWX: 910-563-3734

MISSOURI
11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

2812 South Brentwood Blvd.
St. Louis 63144
Tel: (314) 962-5000
TWX: 910-760-1670

NEW JERSEY
W. 120 Century Road
Paramus 07652
Tel: (201) 265-5600
TWX: 710-990-4951

1060 N. Kings Highway
Cherry Hill 08034
Tel: (609) 667-4000
TWX: 710-892-4945

NEW MEXICO
P.O. Box 8366
Albuquerque 87108
Tel: (505) 255-5586
TWX: 910-989-1665

156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2485
TWX: 910-983-0550

NEW YORK
1702 Central Avenue
Albany 12205
Tel: (518) 869-8462
TWX: 710-441-8270

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

1025 Northern Boulevard
Roslyn, Long Island 11576
Tel: (516) 869-8400
TWX: 510-223-0811

NORTH CAROLINA
P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (919) 885-8101
TWX: 510-926-1516

OHIO
25575 Center Ridge Road
Cleveland 44145
Tel: (216) 835-0300
TWX: 810-427-9129

3460 South Dixie Drive
Dayton 45439
Tel: (513) 298-0351
TWX: 810-459-1925

OKLAHOMA
2919 United Founders Boule vard
Oklahoma City 73112
Tel: (405) 848-2801
TWX: 910-830-6862

OREGON
Westhills Mall, Suite 158
6475 S.W. Schollo Ferry Road
Portland 97225
Tel: (503) 292-9171
TWX: 910-464-6103

PENNSYLVANIA
2500 Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX: 710-797-3650

1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670

RHODE ISLAND
873 Waterman Ave.
East Providence 02914
Tel: (401) 434-5535
TWX: 710-381-7573

TEXAS
P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101
TWX: 910-867-4723

6300 Westpark Drive
Houston 77057
Tel: (713) 781-6000
TWX: 910-881-2645

231 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX: 910-871-1170

UTAH
2890 South Main Street
Salt Lake City 84115
Tel: (801) 487-0715
TWX: 910-925-5681

VERMONT (Feb. 70)
P.O. Box 2287
Kennedy Drive
South Burlington 05401
Tel: (802) 658-4455
TWX: 710-656-4712

VIRGINIA
P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 282-5451
TWX: 710-956-0157

WASHINGTON
433-108th N.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

***WEST VIRGINIA**
Charleston
Tel: (304) 768-1232

FOR U.S. AREAS NOT LISTED:
Contact the regional office nearest you: Atlanta, Georgia
North Hollywood, California
Paramus, New Jersey, Skokie, Illinois. Their complete ad dresses are listed above.

*Service Only

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11745 Jasper Ave.
Edmonton
Tel: (403) 482-5561
TWX: 610-831-2431

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
1037 West Broadway
Vancouver 12
Tel: (604) 731-5301
TWX: 610-922-5059

MANITOBA
Hewlett-Packard (Canada) Ltd.
511 Bradford Cr.
St. James
Tel: (204) 786-7581
TWX: 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
2745 Dutch Village Rd.
Suite 203
Halifax
Tel: (902) 455-0511
TWX: 610-271-4482

ONTARIO
Hewlett-Packard (Canada) Ltd.
880 Lady Ellen Place
Ottawa 3
Tel: (613) 722-4223
TWX: 610-562-1952

Hewlett-Packard (Canada) Ltd.
50 Galaxy Blvd.
Rexdale
Tel: (416) 677-9611
TWX: 610-492-4246

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-20607

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina S.A.C.I.
Lavalle 1171 - 3°
Buenos Aires
Tel: 35-0436, 35-0627, 35-0431
Telex: 012-1009
Cable: HEWPACKARG

BRAZIL
Hewlett-Packard Do Brasil I.e.C. Ltda.
Rua Coronel Oscar Porto, 691
São Paulo - 8, SP
Tel: 71-1503
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil I.e.C. Ltda.
Avenida Franklin Roosevelt 84-grupo 203
Rio de Janeiro, ZC-39, GB
Tel: 232-9733
Cable: HEWPACK Rio de Janeiro

CHILE
Héctor Calcagni y Cia. Ltda.
Bustos, 1932-3er Piso
Casilla 13942
Santiago
Tel: 4 2396
Cable: Calcagni Santiago

COLOMBIA
Instrumentación
Henrik A. Langebaek & Kier Ltda.
Carrera 7 No. 48-59
Apartado Aereo 6287
Bogota, 1, D.E.
Tel: 45-78-06, 45-55-46
Cable: AARIS Bogota
Telex: 044-400

COSTA RICA
Lic. Alfredo Gallegos Gurdián
Apartado 3243
San José
Tel: 21-86-13
Cable: GALGUR San José

ECUADOR
Laboratorios de Radio-Ingeniería
Calle Guayaquil 1246
Post Office Box 3199
Quito
Tel: 12496
Cable: HORVATH Quito

EL SALVADOR
Electrónica
Apartado Postal 1580
27 Avenida Norte 1133
San Salvador
Tel: 25-74-50
Cable: ELECTRONICA San Salvador

GUATEMALA
Olander Associates Latin America
Apartado Postal 1226
Ruta 4, 6-53, Zona 4
Guatemala City
Tel: 63958
Cable: OLALA Guatemala City

JAMAICA
General Engineering Services, Ltd.
27 Dumbrin Ave.
Kingston
Tel: 42657
Cable: GENSERV

MEXICO
Hewlett-Packard Mexicana, S.A. de C.V.
Moras 439
Col. del Valle
Mexico 12, D.F.
Tel: 5-75-46-48

NICARAGUA
Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 3451, 3452
Cable: ROTERAN Managua

PANAMA
Electrónica Balboa, S.A.
P.O. Box 4929
Ave. Manuel Espinosa No. 13-50
Bldg. Alina
Panama City
Tel: 30833
Cable: ELECTRON Panama City

PERU
Fernando Ezeta B.
Avenida Petit Thouars 4719
Miraflores
Casilla 3061
Lima
Tel: 45-2335
Cable: FEPERU Lima

PUERTO RICO
San Juan Electronics, Inc.
P.O. Box 5167
Ponce de Leon 154
Pda. 3-Pta. de Tierra
San Juan 00906
Tel: (809) 725-3342
Cable: SATRONICS San Juan
Telex: SATRON 3450 332

URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIUM Montevideo

VENEZUELA
Hewlett-Packard De Venezuela C.A.
Apartado 50933
Caracas
Tel: 71.88.05, 71.88.85, 71.91.30
Cable: HEWPACK Caracas

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard INTERCONTINENTAL
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8461

www.manualsplus.com
1017223

HEWLETT hp PACKARD

PRINTED IN